



User Manual

IKON-GE100



IKON TECHNOLOGIES CO.

Chapter 1 Safety precautions

Read this manual carefully and follow all safety precautions before moving, installing, operating and servicing the variable-frequency drive (VFD). If ignored, physical injury or death may occur, or damage may occur to the devices.









If any physical injury or death or damage to the devices occurs for ignoring to the safety precautions in the manual, our company will not be responsible for any damages and we are not legally bound in any manner.

1.1 Safety definition





| | |
|--------------------------------|--|
| Danger: | Serious physical injury or even death may occur if related requirements are not followed. |
| Warning: | Physical injury or damage to the devices may occur if related requirements are not followed. |
| Note: | Physical hurt may occur if related requirements are not followed. |
| Qualified electricians: | People working on the device should take part in professional electrical and safety training, receive the certification and be familiar with all steps and requirements of installing, commissioning, operating and maintaining the device to avoid any emergency. |

1.2 Warning signs


Warnings caution you about conditions which can result in serious injury or death and/or damage to the equipment, and advice on how to avoid the danger. Following warning symbols are used in this manual:

| Sign | Name | Instruction | Abbreviation |
|---|-------------------------|---|---|
|  Danger | Danger | Serious physical injury or even death may occur if related requirements are not followed |  |
|  Warning | Warning | Physical injury or damage to the devices may occur if related requirements are not followed |  |
|  Do not touch | Electrostatic discharge | Damage to the PCBA board may occur if related requirements are not followed |  |
|  Hot sides | Hot sides | Sides of the device may become hot. Do not touch. |  |
| Note | Note | Physical hurt may occur if related requirements are not followed | Note |

1.3 Safety guidelines

|  | <ul style="list-style-type: none">Only qualified electricians are allowed to operate on the VFD.Do not carry out any wiring and inspection or changing components when the power supply is applied. Ensure all input power supply is disconnected before wiring and checking and always wait for at least the time designated on the VFD or until the DC bus voltage is less than 36V. Below is the table of the waiting time: <table border="1"><thead><tr><th colspan="2">VFD model</th><th>Minimum waiting time</th></tr></thead><tbody><tr><td>Single-phase 220V</td><td>0.2kW-2.2kW</td><td>5 minutes</td></tr><tr><td>Three-phase 220V</td><td>0.2kW-2.2kW</td><td>5 minutes</td></tr><tr><td>Three-phase 380V</td><td>0.75kW-2.2kW</td><td>5 minutes</td></tr></tbody></table> | VFD model | | Minimum waiting time | Single-phase 220V | 0.2kW-2.2kW | 5 minutes | Three-phase 220V | 0.2kW-2.2kW | 5 minutes | Three-phase 380V | 0.75kW-2.2kW | 5 minutes |
|--|--|----------------------|--|----------------------|-------------------|-------------|-----------|------------------|-------------|-----------|------------------|--------------|-----------|
| VFD model | | Minimum waiting time | | | | | | | | | | | |
| Single-phase 220V | 0.2kW-2.2kW | 5 minutes | | | | | | | | | | | |
| Three-phase 220V | 0.2kW-2.2kW | 5 minutes | | | | | | | | | | | |
| Three-phase 380V | 0.75kW-2.2kW | 5 minutes | | | | | | | | | | | |
|  | <ul style="list-style-type: none">Do not refit the VFD unauthorizedly; otherwise fire, electric shock or other injury may occur. | | | | | | | | | | | | |
|  | <ul style="list-style-type: none">The base of the radiator may become hot during running. Do not touch to avoid hurt. | | | | | | | | | | | | |
|  | <ul style="list-style-type: none">The electrical parts and components inside the VFD are electrostatic. Take measurements to avoid electrostatic discharge during relevant operation. | | | | | | | | | | | | |


1.3.1 Delivery and installation

| | |
|--|--|
|  | <ul style="list-style-type: none"> Install the VFD on fire-retardant material and keep the VFD away from combustible materials. Connect the braking optional parts according to the wiring diagram. Do not operate on the VFD if there is any damage or components loss to the VFD. Do not touch the VFD with wet items or body, otherwise electric shock may occur. |
|--|--|

Note:

- Select appropriate moving and installing tools to ensure a safe and normal running of the VFD and avoid physical injury or death. For physical safety, the erector should take some mechanical protective measurements, such as wearing exposure shoes and working uniforms.
- Ensure to avoid physical shock or vibration during delivery and installation.
- Do not carry the VFD by its cover. The cover may fall off.
- Install away from children and other public places.
- The VFD cannot meet the requirements of low voltage protection in IEC61800-5-1 if the altitude of installation site is above 2000m.
- The pick-up current of the VFD may be above 3.5mA during operation. Ground with proper techniques and ensure the grounding resistor is less than 10Ω. The conductivity of PE grounding conductor is the same as that of the phase conductor (with the same cross sectional area).
- R, S and T are the input terminals of the power supply, while U, V and W are the motor terminals. Please connect the input power cables and motor cables with proper techniques; otherwise the damage to the VFD may occur.


1.3.2 Commissioning and running

| | |
|--|--|
|  | <ul style="list-style-type: none"> ✧ Disconnect all power supplies applied to the VFD before the terminal wiring and wait for at least the designated time after disconnecting the power supply. ✧ High voltage is present inside the VFD during running. Do not carry out any operation except for the keypad setting. ✧ The VFD may start up by itself when P01.21=1. Do not get close to the VFD and motor. ✧ The VFD can not be used as "Emergency-stop device". ✧ The VFD can not be used to break the motor suddenly. A mechanical braking device should be provided. |
|--|--|

Note:

- ✧ Do not switch on/off the input power supply of the VFD frequently.
- ✧ For VFDs that have been stored for a long time, check and fix the capacitance and try to run it again before utilization (see Maintenance and Hardware Fault Diagnose).
- ✧ Cover the front board before running, otherwise electric shock may occur.



1.3.3 Maintenance and replacement of components

| | |
|--|---|
|  | <ul style="list-style-type: none"> ✧ Only qualified electricians are allowed to perform the maintenance, inspection, and components replacement of the VFD. ✧ Disconnect all power supplies to the VFD before the terminal wiring. Wait for at least the time designated on the VFD after disconnection. ✧ Take measures to avoid screws, cables and other conductive matters to fall into the VFD during maintenance and component replacement. |
|--|---|

Note:

- ✧ Select proper torque to tighten screws.
- ✧ Keep the VFD, parts and components away from combustible materials during maintenance and component replacement.
- ✧ Do not carry out any isolation and pressure test on the VFD and do not measure the control circuit of the VFD by megameter.

1.3.4 Device disposal

| | |
|--|---|
|  | <ul style="list-style-type: none"> ✧ There are heavy metals in the VFD. Deal with it as industrial effluent. |
|  | <ul style="list-style-type: none"> ✧ When the life cycle ends, the product should enter the recycling system. Dispose of it separately at an appropriate collection point instead of placing it in the normal waste stream |

Chapter 2 Product overview

2.1 Quick start

2.1.1 Unpacking inspection

Check as followings after receiving products:

| |
|--|
| 1. Check that there are no damage and humidification to the package. If not, please contact with local agents or IKON offices. |
| 2. Check the information on the type designation label on the outside of the package to verify that the drive is of the correct type. If not, please contact with local dealers or IKON offices. |
| 3. Check that there are no signs of water in the package and no signs of damage or breach to the VFD. If not, please contact with local dealers or IKON offices. |
| 4. Check the information on the type designation label on the outside of the package to verify that the nameplate is of the correct type. If not, please contact with local dealers or IKON offices. |
| 5. Check to ensure the accessories (including user's manual and control keypad) inside the device is complete. If not, please contact with local dealers or IKON offices. |

2.1.2 Application confirmation

Check the machine before beginning to use the VFD:

| |
|--|
| 1. Check the load type to verify that there is no overload of the VFD during work and check that whether the drive needs to modify the power degree. |
| 2. Check that the actual current of the motor is less than the rated current of the VFD. |
| 3. Check that the control accuracy of the load is the same of the VFD. |
| 4. Check that the incoming supply voltage is correspondent to the rated voltage of the VFD. |

2.1.3 Environment

Check as followings before the actual installation and usage:

| |
|--|
| 1. Check that the ambient temperature of the VFD is below 40°C . If exceeds, derate 1% for every additional 1°C . Additionally, the VFD can not be used if the ambient temperature is above 50 °C. Note: for the cabinet VFD, the ambient temperature means the air temperature inside the cabinet. |
| 2. Check that the ambient temperature of the VFD in actual usage is above -10°C . If not, add heating facilities. Note: for the cabinet VFD, the ambient temperature means the air temperature inside the cabinet. |
| 3. Check that the altitude of the actual usage site is below 1000m. If exceeds, derate 1% for every additional 100m. |
| 4. Check that the humidity of the actual usage site is below 90% and condensation is not allowed. If not, add additional protection VFDs. |
| 5. Check that the actual usage site is away from direct sunlight and foreign objects can not enter the VFD. If not, add additional protective measures. |
| 6. Check that there is no conductive dust or flammable gas in the actual usage site. If not, add additional protection to VFDs. |

2.1.4 Installation confirmation

Check as followings after the installation:

| |
|--|
| 1. Check that the load range of the input and output cables meet the need of actual load. |
| 2. Check that the accessories of the VFD are correctly and properly installed. The installation cables should meet the needs of every component (including reactors, input filters, output reactors, output filters, DC reactors and braking resistors). |
| 3. Check that the VFD is installed on non-flammable materials and the calorific accessories (reactors and brake resistors) are away from flammable materials. |
| 4. Check that all control cables and power cables are run separately and the routation complies with EMC requirement. |
| 5. Check that all grounding systems are properly grounded according to the requirements of the VFD. |
| 6. Check that the free space during installation is sufficient according to the instructions in user's manual. |
| 7. Check that the installation conforms to the instructions in user's manual. The drive must be installed in an upright position. |
| 8. Check that the external connection terminals are tightly fastened and the torque is appropriate. |
| 9. Check that there are no screws, cables and other conductive items left in the VFD. If not, get them out. |

2.1.5 Basic commissioning

Complete the basic commissioning as followings before actual utilization:

| |
|---|
| 1. Autotune. If possible, de-coupled from the motor load to start dynamic autotune. Or if not, static autotune is available. |
| 2. Adjust the ACC/DEC time according to the actual running of the load. |
| 3. Commission the device via jogging and check that the rotation direction is as required. If not, change the rotation direction by changing the wiring of motor. |
| 4. Set all control parameters and then operate. |

2.2 Product specifications

| Function | | Specification |
|-------------------|--------------------------|--|
| Power input | Input voltage (V) | Single-phase 220(-15%) - 240(+10%) Three-phase 220(-15%) - 240(+10%) Three-phase 380(-15%) - 440(+10%) |
| | Input current (A) | Refer to 2.5 |
| | Input frequency (Hz) | 50Hz or 60Hz Allowed range: 47-63Hz |
| Power output | Output voltage (V) | =the input voltage (error<5%) |
| | Output current (A) | Refer to 2.5 |
| | Output power (kW) | Refer to 2.5 |
| | Output frequency (Hz) | 50Hz/60Hz, fluctuation:±5% |
| Technical control | Control mode | SVPWM |
| | Maximum output frequency | 400Hz |

| Function | | Specification |
|-------------------------|--|---|
| | Adjustable-speed ratio | 1:100 |
| | Overload capability | 150% of rated current: 1 minute 180% of rated current: 10 seconds 200% of rated current: 1 second |
| Peripheral interference | Key functions | Stop mode and anti-ovtemperature of the bus |
| | Temperature measurement accuracy | Overtemperature point $\pm 3^{\circ}\text{C}$ |
| | Terminal switch input resolution | $\leq 2\text{ms}$ |
| | Terminal analog input resolution | $\leq 20\text{mV}$ |
| | Analog input | 1 input 0–10V/0–20mA |
| | Analog output | 1 input 0–10V/0–20mA |
| Running control | Digital input | 5 common input |
| | Digital output | 1 Y output (commonly used with digital output) and 1 pogrammable relay output |
| | Communication | 485 communication |
| | Frequency setting | Digital setting, analog setting, multi-step speed setting, PID setting, MODBUS communication setting and so on Switch between different settings |
| | Automatic voltage adjustment | Keep output voltage stable when the grid voltage changes |
| | Fault protection | More than 10 fault protections |
| Others | Mountable method | Wall mountable |
| | Temperature of the running environment | -10–50°C If temperature is above 40°C , derate 1% for every additional 1°C . |
| | Cooling | Single/three-phase 220V 0.2-0.75kW natural cooling Single/three-phase 220V 1.5-2.2kW, three-phase 380V 0.75-2.2kW |
| | Pollution degree | 2 |
| | Braking unit | Embedded |
| | DC reactor | Not optional |
| | Braking resistor | Optional and external |
| | EMC filter | Optional C3 or C2 filter |

2.3 Nameplate

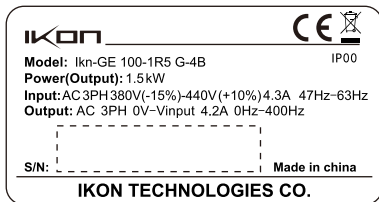


Figure 2-1 Nameplate

Note: Figure 2-1 shows an example of a Ikn-GE100 series VFD namplate. The CE, TUV, or IP rating is labelled according to product certification.

2.4 Type designation key

The type designation contains information on the VFD. The user can find the type designation on the type designation label attached to the VFD or the simple nameplate.

IKN-GE100 – 1R5G – 4 – B

1 2 3 4

Figure 2-2 Product model

| Identifier | Definition | Detailed description |
|------------|-------------------------|---|
| 1 | Product abbreviation | Goodrive10 is shorted for GD10. |
| 2 | Power range + Load type | 2R2-2.2kW G—Constant torque load |
| 3 | Voltage degree | 4: 380(-15%) – 440(+10%) 2: 220(-15%) – 240(+10%) S2: 220(-15%) – 240(+10%) |
| 4 | Lot No. | B: standard braking unit |

2.5 Rated specifications

| | Model | Output power(kW) | Input current(A) | Output current (A) |
|----------------------|---------------------|------------------|------------------|--------------------|
| Single-phase 220V | IKN-GE100-0R2G-S2-B | 0.2 | 4.9 | 1.6 |
| | IKN-GE100-0R4G-S2-B | 0.4 | 6.5 | 2.5 |
| | IKN-GE100-0R7G-S2-B | 0.75 | 9.3 | 4.2 |
| | IKN-GE100-1R5G-S2-B | 1.5 | 15.7 | 7.5 |

| | Model | Output power(kW) | Input current(A) | Output current (A) |
|---------------------|---------------------|------------------|------------------|--------------------|
| | IKN-GE100-2R2G-S2-B | 2.2 | 24 | 10 |
| Three-phase 220V | IKN-GE100-0R2G-2-B | 0.2 | 1.9 | 1.6 |
| | IKN-GE100-0R4G-2-B | 0.4 | 2.7 | 2.5 |
| | IKN-GE100-0R7G-2-B | 0.75 | 4.9 | 4.2 |
| | IKN-GE100-1R5G-2-B | 1.5 | 9.0 | 7.5 |
| | IKN-GE100-2R2G-2-B | 2.2 | 15 | 10 |
| Three-phase 380V | IKN-GE100-0R7G-4-B | 0.75 | 3.2 | 2.5 |
| | IKN-GE100-1R5G-4-B | 1.5 | 4.3 | 4.2 |
| | IKN-GE100-2R2G-4-B | 2.2 | 7.1 | 5.5 |

2.6 Structure diagram

Figure 2-3 shows the structure of the VFD (taking the VFD of 2.2kW as an example).

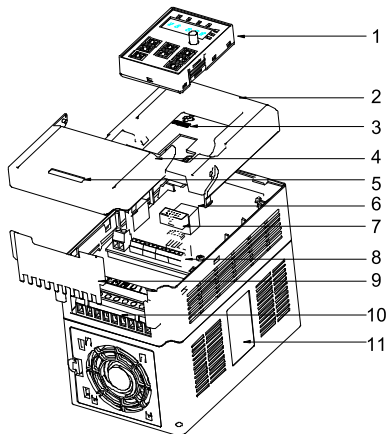


Figure 2-3 Product structure diagram

| No. | Name | Illustration |
|-----|------------------|--|
| 1 | Keypad | See chapter 4 "Keypad operation procedure" for detailed information. |
| 2 | Cover | To protect the internal parts and components. |
| 3 | POWER indicator | POWER indicator |
| 4 | Side cover | To protect the internal components. |
| 5 | Simple nameplate | See section 2.4 "Type designation key" for detailed |

| No. | Name | Illustration |
|-----|---------------------------|---|
| | | information. |
| 6 | Keypad port | To connect the keypad. |
| 7 | | 6 is for external installation. |
| 8 | Control circuit terminals | See section 3.2 "Electrical installation" for detailed information. |
| 9 | Bobbin winder | To protect the internal parts and components, detachable for wiring |
| 10 | Main circuit terminals | See section 3.2 "Electrical installation" for detailed information. |
| 11 | Nameplate | See chapter 2 "Product overview" for detailed information. |

Chapter 3 Installation

The chapter describes the mechanical installation and electrical installation.



- ✧ Only qualified electricians are allowed to carry out what described in this chapter. Please operate as the instructions in **Safety Precautions**. Ignoring these may cause physical injury or death or damage to the devices.
- ✧ Ensure the power supply of the VFD is disconnected during the operation. Wait for at least the time designated until the POWER indicator is off after the disconnection if the power supply is applied.
- ✧ The installation and design of the VFD should be complied with the requirement of the local laws and regulations in the installation site. If the installation infringes the requirement, our company will exempt from any responsibility. Additionally, if users do not comply with the suggestion, some damage beyond the assured maintenance range may occur.

3.1 Mechanical installation

3.1.1 Installation environment

The installation environment is the safeguard for a full performance and long-term stable functions of the VFD. Check the installation environment as follows:

| Environment | Conditions |
|-------------------------|--|
| Installation site | Indoor |
| Environment temperature | <p>-10 °C ~ +40 °C, and the temperature changing rate is less than 0.5°C /minute.</p> <p>If the ambient temperature of the VFD is above 40°C, derate 1% for every additional 1°C.</p> <p>It is not recommended to use the VFD if the ambient temperature is above 60 °C (empty load).</p> <p>In order to improve the reliability of the device, do not use the VFD if the ambient temperature changes frequently.</p> <p>Please provide cooling fan or air conditioner to control the internal ambient temperature below the required one if the VFD is used in a close space such as in the control cabinet.</p> <p>When the temperature is too low, if the VFD needs to restart to run after a long stop, it is necessary to provide an external heating device to increase the internal temperature, otherwise damage to the devices may occur.</p> |
| Humidity | <p>RH≤90%</p> <p>No condensation is allowed.</p> <p>The maximum relative humidity should be equal to or less than 60% in corrosive air.</p> |
| Storage | -40 °C ~+70°C, and the temperature changing rate is less than 1 °C/minute. |

| Environment | Conditions |
|-------------------------------|--|
| temperature | |
| Running environment condition | <p>The installation site of the VFD should:</p> <p>keep away from the electromagnetic radiation source;</p> <p>keep away from contaminative air, such as corrosive gas, oil mist and flammable gas;</p> <p>ensure foreign objects, such as metal power, dust, oil, water can not enter into the VFD(do not install the VFD on the flammable materials such as wood);</p> <p>keep away from direct sunlight, oil mist, steam and vibration environment.</p> |
| Altitude | <p>When the altitude exceeds 1000m but is lower than 3000m, derate 1% for every additional 100m;</p> <p>When the altitude exceeds 2000m, configure an isolation transformer on the input end of the VFD.</p> <p>When the altitude exceeds 3000m but is lower than 5000m, contact our company for technical consultation. Do not use the VFD at an altitude higher than 5000m.</p> |
| Vibration | $\leq 5.8\text{m/s}^2(0.6\text{g})$ |
| Installation direction | The VFD should be installed on an upright position to ensure sufficient cooling effect. |

Note:

- IKON-GE100 series VFDs should be installed in a clean and ventilated environment according to enclosure classification.
- Cooling air must be clean, free from corrosive materials and electrically conductive dust.

3.1.2 Installation direction

The VFD may be installed on the wall or in a cabinet.

The VFD must be installed in an upright position. Check the installation site according to the requirements below. Refer to Appendix B "Dimension Drawings" in the appendix for frame details.

3.1.3 Installation manner

The VFD can be installed in wall mounting (for all frame sizes):

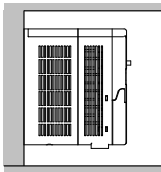


Figure 3-1 Wall mounting

Wall-mounting steps

- (1) Mark the hole location. The location of the holes is shown in the dimension drawings in the appendix.
- (2) Fix the screws or bolts to the marked locations.
- (3) Position the drive onto the wall.
- (4) Tighten the screws in the wall securely.

A.1.1 Installation space

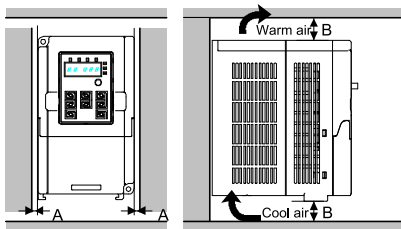


Figure 3-2 Installation space

Note: The minimum space of A and B is 100mm.

3.2 Electrical installation

3.2.1 Connection diagram of main circuit

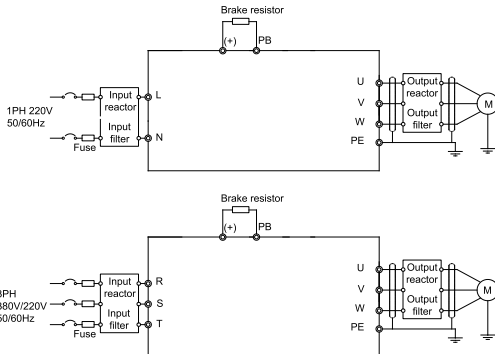


Figure 3-3 Connection diagram of main circuit

Note:

- The fuse, DC reactor, braking resistor, input reactor, input filter, output reactor, output filter are optional parts. Refer to Appendix C "Peripheral options and parts" for detailed information.
- Before connecting the braking resistor cable, remove the yellow labels of PB, (+), and (-) from the

terminal blocks. Otherwise, poor connection may occur.

3.2.2 Terminals figure of main circuit



| | | | | | | | | |
|-----|-----|---|-----|----|---|---|---|---|
| R/L | S/N | T | (+) | PB | U | V | W |  |
|-----|-----|---|-----|----|---|---|---|---|

Figure 3-4 Terminals of main circuit

| Terminal sign | Terminal name | Function |
|--|---------------------------------|--|
| R/L | Power input of the main circuit | 3-phase/single-phase AC input terminals which are generally connected with the grid. |
| S/N | | |
| T | | |
| U | The VFD output | 3-phase AC output terminals which are generally connected with the motor. |
| V | | |
| W | | |
| PB | Braking resistor terminal | PB and (+) are connected to the external resistor. |
| (+) | | |
|  | Grounding terminal | Each machine has a standard PE terminal. |

Note:

- Do not use an asymmetrically constructed motor cable. If there is a symmetrically constructed grounding conductor in the motor cable in addition to the conductive shield, connect the grounding conductor to the grounding terminal at the VFD and motor ends.
- Route the motor cable, input power cable and control cables separately.
- "T" terminal can not be wired in single-phase input.

3.2.3 Wiring of terminals in main circuit

- Connect the ground wire of the input power cable to the ground terminal (PE) of the VFD, and connect the 3PH input cable to the terminals R, S, and T, and fasten them up.
- Connect the ground wire of the motor cable to the ground terminal of the VFD, and connect the 3PH motor cable to the terminals U, V, and W, and fasten them up.
- Connect the brake resistor and other accessories that are equipped with cables to the specified positions.
- Fasten all the cables outside of the VFD mechanically, if possible.

3.2.4 Connection diagram of the control circuit

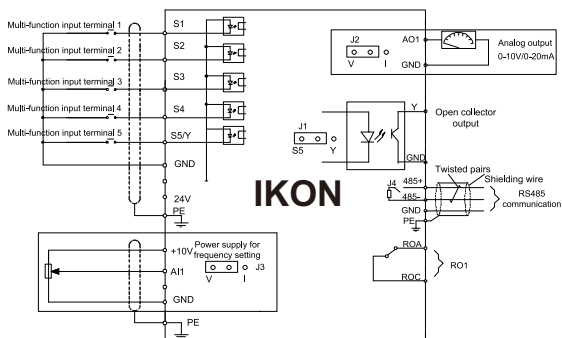


Figure 3-5 Connection diagram of the control circuit

3.2.5 Wiring diagram of control circuit

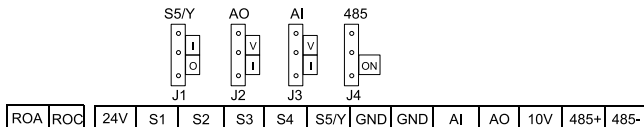


Figure 3-6 Control circuit wiring

| Description | |
|-------------|---|
| ROA | RO relay output |
| ROC | Contactor capability: 3A/AC250V,1A/DC30V |
| +10V | Local power supply +10V |
| AI | 1. Input range: AI voltage and current: 0 – 10V/0 – 20mA and switch by J3 2. Input impedance: voltage input: 20kΩ; current input: 500Ω 3. Resolution: the minimum one is 5mV when 10V corresponds to 50Hz 4. Deviation ±1%, 25 °C Note: Keyboard potentiometer set AI1 parameters of and AI terminal set AI2 parameters |
| 24V | Local +24V power supply, 100mA |
| GND | +10V reference zero potential |
| AO | 1. Output range: 0 – 10V or 0 – 20mA 2. The voltage or the current output is depended on J2 |

| | | |
|------|--|--|
| | 3. Deviation±1%, 25℃ | |
| S1 | Switch input 1 | 1. Internal impedance:3.3kΩ 2. 0 – 4V corresponds to low electric level input and 7 – 30V corresponds to high electric level input 3. Max input frequency:1kHz 4. All are programmable digital input terminal. User can set the terminal function through function codes. |
| S2 | Switch input 2 | |
| S3 | Switch input 3 | |
| S4 | Switch input 4 | |
| S5 | Switch input 5 | Common terminal for S5/Y and switch by J1 Note : S5 and Y can not be used at the same time |
| Y | Digital output terminal | |
| 485+ | 485 communication interface and 485 differential signal interface | |
| 485- | If it is the standard 485 communication interface, please use twisted pairs or shield cable. | |

3.3 Wiring protection

3.3.1 Protect the VFD and input power cable in short-circuit situations

Protect the VFD and input power cable in short circuit situations and against thermal overload.

Arrange the protection according to the following guidelines.

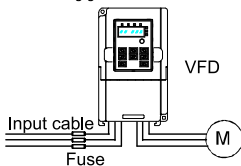


Figure 3-7 Fuse configuration

Note: Select the fuse as the manual indicated. The fuse will protect the input power cable from damage in short-circuit situations. It will protect the surrounding devices when the internal of the VFD is short circuited.

3.3.2 Protecting the motor and motor cables

The VFD protects the motor and motor cable in a short-circuit situation when the motor cable is dimensioned according to the rated current of the VFD. No additional protection devices are needed.



- ✧ If the VFD is connected to multiple motors, a separate thermal overload switch or a circuit breaker must be used for protecting each cable and motor. These devices may require a separate fuse to cut off the short-circuit current.

3.3.3 Implementing a bypass connection

It is necessary to set power frequency and variable frequency conversion circuits for the assurance of continuous normal work of the VFD if faults occur in some significant situations.

In some special situations, for example, if it is only used in soft start, the VFD can be conversed into power frequency running after starting and some corresponding bypass should be added.



✧ Never connect the supply power to the VFD output terminals U, V and W. Power line voltage applied to the output can result in permanent damage to the VFD.

If frequent shifting is required, employ mechanically connected switches or contactors to ensure that the motor terminals are not connected to the AC power line and VFD output terminals simultaneously.

Chapter 4 Keypad

4.1 Keypad description

The keypad is used to control IKN-GE100 series VFDs, read the state data and adjust parameters. If you need to use the keypad in another place rather than on the VFD, use a network cable with a standard RJ45 crystal head as the extension cable.

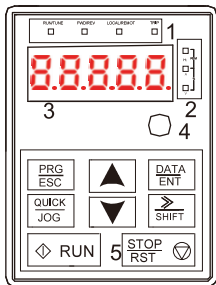
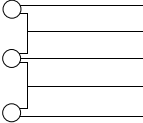










Figure 4-1 Keypad

Note: Fix the external keypad with M3 screws or the installation bracket. The installation bracket is optional.

| No. | Name | Description | |
|-----|-----------|-----------------------------------|---|
| 1 | State LED | RUN/TUNE | LED off means that the VFD is in the stopping state; LED blinking means the VFD is in the parameter autotune state; LED on means the VFD is in the running state. |
| | | FWD/REV | FED/REV LED LED off means the VFD is in the forward rotation state; LED on means the VFD is in the reverse rotation state |
| | | LOCAL/REMOT | LED for keypad operation, terminals operation and remote communication control LED off means that the VFD is in the keypad operation state; LED blinking means the VFD is in the terminals operation state; LED on means the VFD is in the remote communication control state. |
| | | TRIP | LED for faults LED on when the VFD is in the fault state; LED off in normal state; LED blinking means the VFD is in the overload pre-alarm state. |
| 2 | Unit LED | Mean the unit displayed currently | |

| No. | Name | Description | | | | | |
|-----|-----------------------|--|--------------------|--|--------------------|----------------|--------------------|
| | |  | Hz | Frequency unit | | | |
| | | | A | Current unit | | | |
| | | | V | Voltage unit | | | |
| | | | RPM | Rotating speed unit | | | |
| | | | % | Percentage | | | |
| 3 | Code displaying zone | 5-figure LED display displays various monitoring data and alarm code such as set frequency and output frequency. | | | | | |
| | | Displayed word | Corresponding word | Displayed word | Corresponding word | Displayed word | Corresponding word |
| | | 0 | 0 | 1 | 1 | 2 | 2 |
| | | 3 | 3 | 4 | 4 | 5 | 5 |
| | | 6 | 6 | 7 | 7 | 8 | 8 |
| | | 9 | 9 | A | A | B | B |
| | | C | C | d | d | E | E |
| | | F | F | H | H | I | I |
| | | L | L | N | N | n | n |
| | | o | o | P | P | r | r |
| | | S | S | t | t | U | U |
| | | v | v | . | . | - | - |
| 4 | Digital potentiometer | Corresponds to AI1. | | | | | |
| 5 | Buttons |  | Programming key | Enter or escape from the first level menu and remove the parameter quickly | | | |
| | |  | Entry key | Enter the menu step-by-step Confirm parameters | | | |
| | |  | UP key | Increase data or function code progressively | | | |
| | |  | DOWN key | Decrease data or function code progressively | | | |
| | |  | Right-shift key | Move right to select the displaying parameter circularly in stopping and running mode. Select the parameter modifying digit during the parameter modification | | | |
| | |  | Run key | This key is used to operate on the VFD in key operation mode | | | |
| | |  | Stop/Reset key | This key is used to stop in running state and it is limited by function code P07.04 This key is used to reset all control modes in the fault alarm state | | | |

| No. | Name | Description | | |
|-----|------|---|-----------|--|
| | |  | Quick key | The function of this key is confirmed by function code P07.02. |



4.2 Keypad display

The keypad displaying state of IKON-GE100 series VFDs is divided into stopping state parameter, running state parameter, function code parameter editing state and fault alarm state and so on.

4.2.1 Displayed state of stopping parameter



When the VFD is in the stopping state, the keypad will display stopping parameters which is shown in figure 4-2.

In the stopping state, various kinds of parameters can be displayed. Select the parameters to be displayed or not by P07.07. See the instructions of P07.07 for the detailed definition of each bit.


In the stopping state, there are 14 stopping parameters can be selected to be displayed or not. They are: set frequency, bus voltage, input terminals state, output terminals state, PID reference, PID feedback, AI1, AI2 and the current stage of multi-stage speeds, pulse counting value. P07.07 can select the parameter to be displayed or not by bit and  /SHIFT can shift the parameters form left to right,  (P07.02=2) can shift the parameters form right to left.

4.2.2 Displayed state of running parameters





After the VFD receives valid running commands, the VFD will enter into the running state and the keypad will display the running parameters. RUN/TUNE LED on the keypad is on, while the FWD/REV is determined by the current running direction which is shown as figure 4-2.

In the running state, there are 22 parameters can be selected to be displayed or not. They are: running frequency, set frequency, bus voltage, output voltage, output torque, PID reference, PID feedback, input terminals state, output terminals state, and the current stage of multi-stage speeds, pulse counting value, AI1, AI2, percentage of motor overload, percentage of VFD overload, linear speed. P07.05 and P07.06 can select the parameter to be displayed or not by bit and  /SHIFT can shift the parameters form left to right,  (P07.02=2) can shift the parameters from right to left.

4.2.3 Displayed state of fault

If the VFD detects the fault signal, it will enter into the fault pre-alarm displaying state. The keypad will display the fault code by flicking. The TRIP LED on the keypad is on, and the fault reset can be operated by the  on the keypad, control terminals or communication commands.

4.2.4 Displayed state of function codes editing

In the state of stopping, running or fault, press  to enter into the editing state (if there is a password, see P07.00).The editing state is displayed on two classes of menu, and the order is: function code group/function code number→function code parameter, press  into the displayed state of function parameter. On this state, press  to save the parameters or press  to escape.

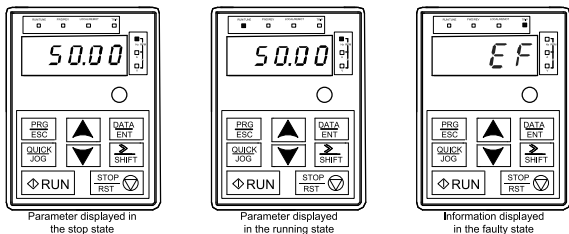


Figure 4-2 Displayed states

4.3 Keypad operation

Operate the VFD via operation panel. See the detailed structure description of function codes in the brief diagram of function codes.

4.3.1 How to modify the function codes of the VFD

The VFD has three levels menu, which are:

1. Group number of function code (first-level menu)
2. Tab of function code (second-level menu)
3. Set value of function code (third-level menu)

Remarks: Press both the **PRG/ESC** and the **DATA/ENT** can return to the second-level menu from the third-level menu. The difference is: pressing **DATA/ENT** will save the set parameters into the control panel, and then return to the second-level menu with shifting to the next function code automatically; while pressing **PRG/ESC** will directly return to the second-level menu without saving the parameters, and keep staying at the current function code.

Under the third-level menu, if the parameter has no flickering bit, it means the function code cannot be modified. The possible reasons could be:

- 1) This function code is not modifiable parameter, such as actual detected parameter, operation records and so on;
- 2) This function code is not modifiable in running state, but modifiable in stop state.

Example: Set function code P00.01 from 0 to 1.

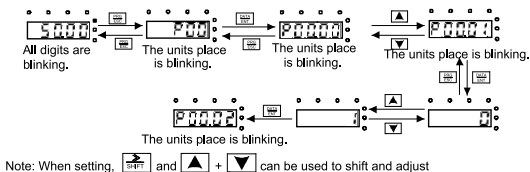


Figure 4-3 Sketch map of modifying parameters

4.3.2 How to set the password of the VFD

IKN-GE100 series VFDs provide password protection function to users. Set P7.00 to gain the password and the password protection becomes valid instantly after quitting from the function code editing state. Press **PRG/ESC** again to the function code editing state, "0.0.0.0.0" will be displayed. Unless using the correct password, the operators cannot enter it.

Set P7.00 to 0 to cancel password protection function.

The password protection becomes valid instantly after retreating from the function code editing state. Press **PRG/ESC** again to the function code editing state, "0.0.0.0.0" will be displayed. Unless using the correct password, the operators cannot enter it.

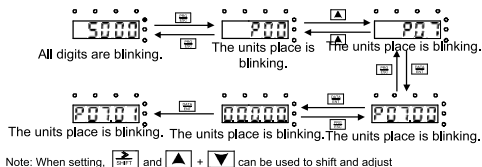


Figure 4-4 Sketch map of password setting

4.3.3 How to view the VFD state through function codes

Goodrive10 series VFDs provide group P17 as the state inspection group. Users can enter into P17 directly to watch the state.

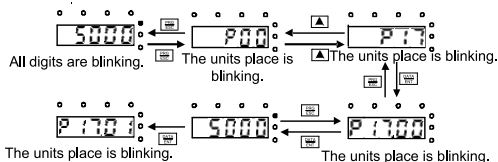


Figure 4-5 Sketch map of state watching

Chapter 5 Function parameters

The function parameters of IKON-GE100 series VFDs have been divided into 30 groups (P00–P29) according to the function, of which P18 – P28 are reserved. Each function group contains certain function codes applying 3-level menus. For example, “P08.08” means the eighth function code in the P8 group function, P29 group is factory reserved, and users are forbidden to access these parameters.

For the convenience of function codes setting, the function group number corresponds to the first level menu, the function code corresponds to the second level menu and the function code corresponds to the third level menu.

1. Below is the instruction of the function lists:

The first column “Function code”:codes of function parameter group and parameters .

The second column “Name”:full name of function parameters .

The third column “Detailed description of parameters”:Detailed illustration of the function parameters

The fourth column “Default value”:the original factory set value of the function parameter .

The fifth column “Modify”: the modifying character of function codes (the parameters can be modified or not and the modifying conditions), below is the instruction:

“ ”: means the set value of the parameter can be modified on stop and running state ,

“ ”: means the set value of the parameter can not be modified on the running state ,

“ ”: means the value of the parameter is the real detection value which can not be modified.


| Function code | Name | Detailed description of parameters | Default value | Modify |
|----------------------------------|-----------------------------|---|---------------|--------|
| P00 group Basic functions | | | | |
| P00.00 | Speed control mode | <p>2:SVPWM control (suitable for asynchronous motor) 2 is suitable in cases where it does not need high control accuracy, such as the load of fan and pump. One VFD can drive multiple motors.</p> <p>Note: Carry out motor parameter autotuning before adopting vector mode.</p> | 2 | |
| P00.01 | Channel of running commands | <p>Select the run command channel of the VFD. The control command of the VFD includes: start-up, stop, forward, reverse, jogging and fault reset. 0:Keypad running command channel(“LOCAL/REMOT” light off) Carry out the command control by RUN, STOP/RST on the keypad. Set the multi-function key QUICK/JOG to FWD/REV shifting function (P07.02=3) to change the running direction; press RUN and STOP/RST simultaneously in running state to make the VFD coast to stop.</p> | 0 | |


| Function code | Name | Detailed description of parameters | Default value | Modify |
|---------------|--------------------------------------|---|---------------|--------|
| | | <p>1:Terminal running command channel ("LOCAL/REMOTE" flickering)</p> <p>Carry out the running command control by the forward rotation, reverse rotation and forward jogging and reverse jogging of the multi-function terminals</p> <p>2:Communication running command channel ("LOCAL/REMOTE" on).</p> <p>The running command is controlled by the upper monitor via communication</p> | | |
| P00.03 | Max. output frequency | <p>This parameter is used to set the maximum output frequency of the VFD. Users should pay attention to this parameter because it is the foundation of the frequency setting and the speed of acceleration and deceleration.</p> <p>Setting range: P00.04–400.00Hz</p> | 50.00Hz | |
| P00.04 | Upper limit of the running frequency | <p>The upper limit of the running frequency is the upper limit of the output frequency of the VFD which is lower than or equal to the maximum frequency.</p> <p>Setting range:P00.05–P00.03 (Max. output frequency)</p> | 50.00Hz | |
| P00.05 | Lower limit of the running frequency | <p>The lower limit of the running frequency is that of the output frequency of the VFD.</p> <p>The VFD runs at the lower limit frequency if the set frequency is lower than the lower limit one.</p> <p>Note: Max. output frequency ≥ Upper limit frequency ≥ Lower limit frequency</p> <p>Setting range:0.00Hz–P00.04 (Upper limit of the running frequency)</p> | 0.00Hz | |
| P00.06 | A frequency command selection | <p>Note: Frequency A and frequency B cannot use the same frequency setting mode. The frequency source can be set by P00.09.</p> <p>0:Keypad data setting (correspond to the keyboard potentiometer)</p> <p>Modify the value of function code P00.10 (set the frequency by keypad) to modify the frequency by the keypad.</p> <p>1:Analog AI1 setting (correspond to AI)</p> <p>2:Analog AI2 setting</p> <p>Analog input terminal sets the frequency. There are 2 standard analog input terminal, of which AI1 is adjusted through digital potentiometer, AI2 (0 – 10V/0 – 20mA)can</p> | 0 | |
| P00.07 | B frequency command selection | | 2 | |



| Function code | Name | Detailed description of parameters | Default value | Modify |
|---------------|--|---|---------------|--------|
| | | <p>be switched by the jumper.</p> <p>Note: when AI2 selects 0 – 20mA input, 20mA corresponds to 10V.</p> <p>100.0% of the analog input corresponds to P00.03, -100.0% of the analog input corresponds to the reverse P00.03.</p> <p>6: Multi-stage speed running setting</p> <p>The VFD runs at multi-stage speed mode when P00.06=6 or P00.07=6. Set P05 to select the current running stage, and set P10 to select the current running frequency.</p> <p>The multi-stage speed has the priority when P00.06 or P00.07 does not equal to 6, but the setting stage can only be the 1–15 stage. The setting stage is 1–15 if P00.06 or P00.07 equals to 6.</p> <p>7: PID control setting</p> <p>The running mode of the VFD is process PID control when P00.06=7 or P00.07=7. It is necessary to set P09. The running frequency of the VFD is the value after PID effect. See P09 for the detailed information of the preset source, preset value, feedback source of PID.</p> <p>8:MODBUS communication setting</p> <p>The frequency is set by MODBUS communication. See P14 for detailed information.</p> | | |
| P00.08 | B frequency command reference | <p>0: Maximum output frequency, 100% of B frequency setting corresponds to the maximum output frequency</p> <p>1: A frequency command, 100% of B frequency setting corresponds to the maximum output frequency. Select this setting if it needs to adjust on the base of A frequency command</p> | 1 | |
| P00.09 | Combination type of the setting source | <p>0: A, the current frequency setting is A frequency command</p> <p>1: B, the current frequency setting is B frequency command</p> <p>2: A+B, the current frequency setting is A frequency command + B frequency command</p> <p>3: A-B, the current frequency setting is A frequency command - B frequency command</p> <p>4: Max (A, B): The bigger one between A frequency command and B frequency is the set frequency.</p> <p>5: Min (A, B): The lower one between A frequency command and B frequency is the set frequency.</p> <p>Note:The combination manner can be shifted by P05(terminal function)</p> | 0 | |
| P00.10 | Keypad set frequency | When A and B frequency commands are selected as "keypad setting", this parameter will be the initial value of | 50.00Hz | |


| Function code | Name | Detailed description of parameters | Default value | Modify | | | | |
|---------------|------------------------------------|---|-----------------|------------------------------------|-----------|------|-----------------|--|
| | | VFD reference frequency Setting range:0.00 Hz–P00.03(the Max. frequency) | | | | | | |
| P00.11 | ACC time 1 | ACC time means the time needed if the VFD speeds up from 0Hz to the Max. One (P00.03). | Depend on model | | | | | |
| P00.12 | DEC time 1 | DEC time means the time needed if the VFD speeds down from the Max. Output frequency to 0Hz (P00.03). Goodrive10 series VFDs define four groups of ACC/DEC time which can be selected by P05. The factory default ACC/DEC time of the VFD is the first group. Setting range of P00.11 and P00.12:0.0–3600.0s | Depend on model | | | | | |
| P00.13 | Running direction selection | 0: Runs at the default direction, the VFD runs in the forward direction. FWD/REV indicator is off. 1: Runs at the opposite direction, the VFD runs in the reverse direction. FWD/REV indicator is on. Modify the function code to shift the rotation direction of the motor. This effect equals to the shifting the rotation direction by adjusting either two of the motor lines (U, V and W). The motor rotation direction can be changed by QUICK/JOG on the keypad. Refer to parameter P07.02. Note: When the function parameter comes back to the default value, the motor's running direction will come back to the factory default state, too. In some cases it should be used with caution after commissioning if the change of rotation direction is disabled. 2: Forbid to run in reverse direction: It can be used in some special cases if the reverse running is disabled. | 0 | | | | | |
| P00.14 | Carrier frequency setting | The relationship table of the motor type and carrier frequency: <table border="1"><tr><th>Motor type</th><th>Factory value of carrier frequency</th></tr><tr><td>0.2–2.2kW</td><td>4kHz</td></tr></table> | Motor type | Factory value of carrier frequency | 0.2–2.2kW | 4kHz | Depend on model | |
| Motor type | Factory value of carrier frequency | | | | | | | |
| 0.2–2.2kW | 4kHz | | | | | | | |


| Function code | Name | Detailed description of parameters | Default value | Modify | | | | | | | | | | | | | | | | |
|-------------------|----------------------------|--|---------------------|------------------------|---------------------------|---------------------|------|--------|-------|-------|-------|--|--|--|-------|-------|--------|--------|--|--|
| | | <table><thead><tr><th>Carrier frequency</th><th>Electro magnetic noise</th><th>Noise and leakage current</th><th>Heating eliminating</th></tr></thead><tbody><tr><td>1kHz</td><td>↑ High</td><td>↑ Low</td><td>↑ Low</td></tr><tr><td>10kHz</td><td></td><td></td><td></td></tr><tr><td>15kHz</td><td>↓ Low</td><td>↓ High</td><td>↓ High</td></tr></tbody></table> <p>The advantage of high carrier frequency: ideal current waveform, little current harmonic wave and motor noise.</p> <p>The disadvantage of high carrier frequency: increasing the switch loss, increasing VFD temperature and the impact to the output capacity. The VFD needs to derate on high carrier frequency. At the same time, the leakage and electrical magnetic interference will increase.</p> <p>Applying low carrier frequency is contrary to the above, too low carrier frequency will cause unstable running, torque decreasing and surge.</p> <p>The manufacturer has set a reasonable carrier frequency when the VFD is in factory. In general, users do not need to change the parameter.</p> <p>When the frequency used exceeds the default carrier frequency, the VFD needs to derate 10% for each additional 1kHz carrier frequency.</p> <p>Setting range:1.0—15.0kHz</p> | Carrier frequency | Electro magnetic noise | Noise and leakage current | Heating eliminating | 1kHz | ↑ High | ↑ Low | ↑ Low | 10kHz | | | | 15kHz | ↓ Low | ↓ High | ↓ High | | |
| Carrier frequency | Electro magnetic noise | Noise and leakage current | Heating eliminating | | | | | | | | | | | | | | | | | |
| 1kHz | ↑ High | ↑ Low | ↑ Low | | | | | | | | | | | | | | | | | |
| 10kHz | | | | | | | | | | | | | | | | | | | | |
| 15kHz | ↓ Low | ↓ High | ↓ High | | | | | | | | | | | | | | | | | |
| P00.16 | AVR function selection | 0:Invalid 1:Valid during the whole process The auto-adjusting function of the VFD can cancel the impact on the output voltage of the VFD because of the bus voltage fluctuation. | 1 | | | | | | | | | | | | | | | | | |
| P00.18 | Function restore parameter | 0:No operation 1:Restore the default value 2:Clear fault records Note: The function code will restore to 0 after finishing the operation of the selected function code. Restoring to the default value will cancel the user password, please use this function with caution. | 0 | | | | | | | | | | | | | | | | | |
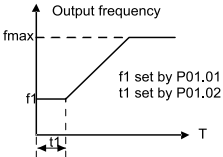
| Function code | Name | Detailed description of parameters | Default value | Modify |
|---|--|--|---------------|--------|
| P01 group Start and stop control | | | | |
| P01.00 | Start mode | 0:Start-up directly:start from the starting frequency P01.01 1:Start-up after DC braking: start the motor from the starting frequency after DC braking (set the parameter P01.03 and P01.04). It is suitable in the cases where reverse rotation may occur to the low inertia load during starting. | 0 | |
| P01.01 | Starting frequency of direct start-up | Starting frequency of direct start-up means the original frequency during the VFD starting. See P01.02 for detailed information. Setting range: 0.00–50.00Hz | 0.50Hz | |
| P01.02 | Retention time of the starting frequency | Set a proper starting frequency to increase the torque of the VFD during starting. During the retention time of the starting frequency, the output frequency of the VFD is the starting frequency. And then, the VFD will run from the starting frequency to the set frequency. If the set frequency is lower than the starting frequency, the VFD will stop running and keep in the stand-by state. The starting frequency is not limited in the lower limit frequency.  <p>Setting range: 0.0–50.0s</p> | 0.0s | |
| P01.03 | The braking current before starting | The VFD will carry out DC braking at the braking current set before starting and it will speed up after the DC braking time. If the DC braking time is set to 0, the DC braking is invalid. The stronger the braking current, the bigger the braking power. The DC braking current before starting means the percentage of the rated current of the VFD. Setting range of P01.03: 0.0–100.0% | 0.0% | |
| P01.04 | The braking time before starting | | 0.00s | |

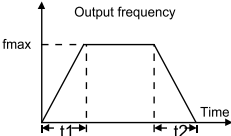
| Function code | Name | Detailed description of parameters | Default value | Modify |
|---------------|----------------------------------|--|---------------|--------|
| | | Setting range of P01.04: 0.0–50.0s | | |
| P01.05 | ACC/DEC selection | <p>The changing mode of the frequency during start-up and running.</p> <p>0: Linear type</p> <p>The output frequency increases or decreases linearly.</p>  | 0 | |
| P01.08 | Stop selection | <p>0: Decelerate to stop: after the stop command becomes valid, the VFD decelerates to decrease the output frequency during the set time. When the frequency decreases to 0, the VFD stops.</p> <p>1: Coast to stop: after the stop command becomes valid, the VFD ceases the output immediately. And the load coasts to stop at the mechanical inertia.</p> | 0 | |
| P01.09 | Starting frequency of DC braking | Starting frequency of DC braking: start the DC braking when running frequency reaches starting frequency determined by P1.09. | 0.00Hz | |
| P01.10 | Waiting time before DC braking | Waiting time before DC braking: VFDs block the output before starting the DC braking. After this waiting time, the DC braking will be started so as to prevent over-current fault caused by DC braking at high speed. | 0.00s | |
| P01.11 | DC braking current | DC braking current The value of P01.11 is the percentage of rated current of VFD. The bigger the DC braking current is, the greater the braking torque is. | 0.0% | |
| P01.12 | DC braking time | DC braking time: The retention time of DC brake. If the time is 0, the DC brake is invalid. The VFD will stop at the set deceleration time. | 0.00s | |

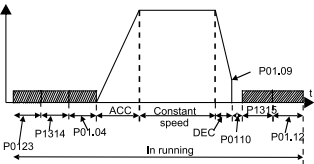
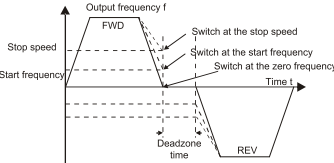
| Function code | Name | Detailed description of parameters | Default value | Modify |
|---------------|--|--|---------------|--------|
| | |  <p>Setting range of P01.09: 0.00Hz–P00.03 Setting range of P01.10: 0.0–50.0s Setting range of P01.11: 0.0–100.0% Setting range of P01.12: 0.0–50.0s</p> | | |
| P01.13 | Dead time of FWD/REV rotation | <p>During the procedure of switching FWD/REV rotation, set the threshold by P01.14, which is as the table below:</p>  <p>Setting range: 0.0–3600.0s</p> | 0.00s | |
| P01.14 | Switching between FWD/REV rotation | <p>Set the threshold point of the VFD:</p> <ul style="list-style-type: none"> 0: Switch after 0 frequency 1: Switch after the starting frequency 2: Switch after a delay time when the VFD stops | 0 | |
| P01.15 | Stopping speed | 0.00–100.00Hz | 1.00 Hz | |
| P01.18 | Terminal running protection when powering on | <p>When the running command channel is the terminal control, the system will detect the state of the running terminal during powering on.</p> <p>0: The terminal running command is invalid when powering on. Even the running command is detected to be valid during powering on, the VFD won't run and the system keeps in the protection state until the running command is canceled and enabled again.</p> | 0 | |
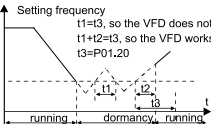
| Function code | Name | Detailed description of parameters | Default value | Modify |
|---------------|---|---|---------------|--------|
| | | <p>1: The terminal running command is valid when powering on. If the running command is detected to be valid during powering on, the system will start the VFD automatically after the initialization.</p> <p>Note: this function should be selected with cautions, or serious result may follow.</p> | | |
| P01.19 | The running frequency is lower than the lower limit one (valid if the lower limit frequency is above 0) | <p>This function code determines the running state of the VFD when the set frequency is lower than the lower-limit one.</p> <p>0: Run at the lower-limit frequency</p> <p>1: Stop</p> <p>2: Hibernation</p> <p>The VFD will coast to stop when the set frequency is lower than the lower-limit one. If the set frequency is above the lower limit one again and it lasts for the time set by P01.20, the VFD will come back to the running state automatically.</p> | 0 | |
| P01.20 | Hibernation restore delay time | <p>This function code determines the hibernation delay time. When the running frequency of the VFD is lower than the lower limit one, the VFD will pause to stand by.</p> <p>When the set frequency is above the lower limit one again and it lasts for the time set by P01.20, the VFD will run automatically.</p>  <p>Setting range: 0.0–3600.0s (valid when P01.19=2)</p> | 0.0s | |
| P01.21 | Restart after power off | <p>This function can enable the VFD start or not after the power off and then power on.</p> <p>0: Disabled</p> <p>1: Enabled, if the starting need is met, the VFD will run automatically after waiting for the time defined by P01.22.</p> | 0 | |
| P01.22 | The waiting time of restart | <p>The function determines the waiting time before the automatic running of the VFD when powering off and then</p> | 1.0s | |
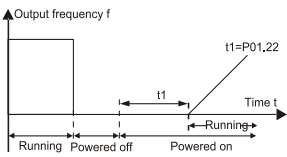
| Function code | Name | Detailed description of parameters | Default value | Modify |
|-----------------------------------|------------------------------------|---|-----------------|--------|
| | after power off | <p>powering on.</p>  <p>Setting range: 0.0–3600.0s (valid when P01.21=1)</p> | | |
| P01.23 | Start delay time | <p>The function determines the brake release after the running command is given, and the VFD is in a stand-by state and wait for the delay time set by P01.23</p> <p>Setting range: 0.0–60.0s</p> | 0.0s | |
| P01.24 | Delay of the stopping speed | <p>Setting range: 0.0–100.0 s</p> | 0.0s | |
| P02 group Motor parameters | | | | |
| P02.01 | Asynchronous motor rated power | 0.1–3000.0kW | Depend on model | |
| P02.02 | Asynchronous motor rated frequency | 0.01Hz–P00.03(the Max. frequency) | 50.00Hz | |
| P02.03 | Asynchronous motor rated speed | 1–36000rpm | Depend on model | |
| P02.04 | Asynchronous motor rated voltage | 0–1200V | Depend on model | |
| P02.05 | Asynchronous motor rated current | 0.8–6000.0A | Depend on model | |

| Function code | Name | Detailed description of parameters | Default value | Modify |
|---------------|---------------------------------------|--|-----------------|--------|
| P02.06 | Asynchronous motor stator resistor | 0.001–65.535Ω | Depend on model | |
| P02.07 | Asynchronous motor rotor resistor | 0.001–65.535Ω | Depend on model | |
| P02.08 | Asynchronous motor leakage inductance | 0.1–6553.5mH | Depend on model | |
| P02.09 | Asynchronous motor mutual inductance | 0.1–6553.5mH | Depend on model | |
| P02.10 | Asynchronous motor non-load current | 0.1–6553.5A | Depend on model | |
| P02.26 | Motor overload protection | <p>0: No protection</p> <p>1: Common motor (with low speed compensation). Because the heat-releasing effect of the common motors will be weakened, the corresponding electric heat protection will be adjusted properly. The low speed compensation characteristic mentioned here means reducing the threshold of the overload protection of the motor whose running frequency is below 30Hz.</p> <p>2: Frequency conversion motor (without low speed compensation) Because the heat-releasing effect of the specific motors won't be impacted by the rotation speed, it is not necessary to adjust the protection value during low-speed running.</p> | 2 | |
| P02.27 | Motor overload protection | When P02.27=overload protection current of the motor/rated current of the motor | 100.0% | |


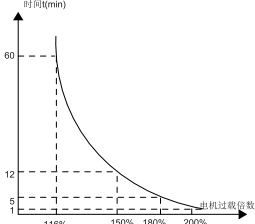
| Function code | Name | Detailed description of parameters | Default value | Modify |
|--------------------------------|-------------------------|--|---------------|--------|
| | coefficient | <p>So, the bigger the overload coefficient is, the shorter the reporting time of the overload fault is. When the overload coefficient $< 110\%$, there is no overload protection. When $M=116\%$, protection is performed after motor overload lasts for 1 hour; when $M=150\%$, protection is performed after motor overload lasts for 12 minutes; when $M=180\%$, protection is performed after motor overload lasts for 5 minutes; when $M=200\%$, protection is performed after motor overload lasts for 60 seconds; and when $M \geq 400\%$, protection is performed immediately.</p>  <p>Setting range: 20.0%~120.0%</p> | | |
| P04 group SVPWM control | | | | |
| P04.00 | Motor V/F curve setting | <p>These function codes define the V/F curve of Goodrive10 motor to meet the need of different loads.</p> <p>0: Straight line V/F curve. applying to the constant torque load</p> <p>1: Multi-dots V/F curve</p> | 0 | |
| P04.01 | Torque boost | Torque boost to the output voltage for the features of low frequency torque. P04.01 is for the Max. Output voltage V_b . | 0.0% | |
| P04.02 | Torque boost close | <p>P04.02 defines the percentage of closing frequency of manual torque to f_b.</p> <p>Torque boost should be selected according to the load. The bigger the load is, the bigger the torque is. Too big torque boost is inappropriate because the motor will run with over magnetic, and the current of the VFD will increase to add the temperature of the VFD and decrease the efficiency.</p> <p>When the torque boost is set to 0.0%, the VFD is automatic</p> | 20.0% | |

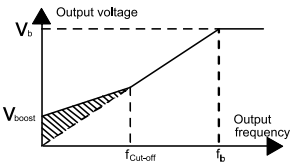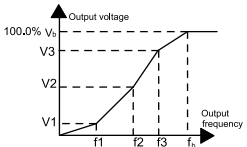
| Function code | Name | Detailed description of parameters | Default value | Modify |
|---------------|-----------------------------|---|---------------|--------|
| | | <p>torque boost.</p> <p>Torque boost threshold: below this frequency point, the torque boost is valid, but over this frequency point, the torque boost is invalid.</p>  <p>Setting range of P04.01:0.0%:(automatic)0.1%–10.0% Setting range of P04.02:0.0%–50.0%</p> | | |
| P04.03 | Motor V/F frequency point 1 |  <p>When P04.00 =1, the user can set V//F curve through P04.03–P04.08. V/F is generally set according to the load of the motor. Note: $V_1 < V_2 < V_3$, $f_1 < f_2 < f_3$. Too high low frequency voltage will heat the motor excessively or damage. The VFD may occur the overcurrent speed or overcurrent protection.</p> <p>Setting range of P04.03: 0.00Hz–P04.05 Setting range of P04.04, P04.06 and P04.08 : 0.0%–110.0% Setting range of P04.05:P04.03– P04.07 Setting range of P04.07:P04.05–P02.02(the rated frequency of motor 1)</p> | 0.00Hz | |
| P04.04 | Motor V/F voltage point 1 | | 00.0% | |
| P04.05 | Motor V/F frequency point 2 | | 00.00Hz | |
| P04.06 | Motor V/F voltage point 2 | | 00.0% | |
| P04.07 | Motor V/F frequency point 3 | | 00.00Hz | |
| P04.08 | Motor V/F voltage point 3 | | 00.0% | |

| Function code | Name | Detailed description of parameters | Default value | Modify |
|----------------------------------|---|--|-----------------|--------|
| P04.09 | Motor V/F slip compensation gain | <p>This function code is used to compensate the change of the rotation speed caused by load during compensation SVPWM control to improve the rigidity of the motor. It can be set to the rated slip frequency of the motor which is counted as below:</p> $\Delta f = f_b \cdot n \cdot p / 60$ <p>Of which, f_b is the rated frequency of the motor, its function code is P02.02; n is the rated rotating speed of the motor and its function code is P02.03; p is the pole pair of the motor. 100.0% corresponds to the rated slip frequency Δf. Note: no torque compensation for single-phase 220V VFDs Setting range: 0.0–200.0%</p> | 380V: 100.0% | |
| | | | 220V: 0% | |
| P04.10 | Low frequency vibration control factor | <p>In the SVPWM control mode, current fluctuation may occur to the motor on some frequency, especially the motor with big power. The motor can not run stably or overcurrent may occur. These phenomena can be canceled by adjusting this parameter.</p> <p>Setting range of P04.10: 0–100 Setting range of P04.11: 0–100 Setting range of P04.12: 0.00Hz–P00.03(the Max. frequency)</p> | 10 | |
| P04.11 | High frequency vibration control factor | | 10 | |
| P04.12 | Vibration control threshold | | 30.00 Hz | |
| P04.26 | Energy-saving operation | <p>0: No operation 1: Automatic energy-saving</p> <p>The motor adjust the output voltage in non-load state automatically.</p> | 0 | |
| P05 group Input terminals | | | | |
| P05.01 | S1 terminal function selection | <p>0: No function 1: Forward rotation operation 2: Reverse rotation operation 3: 3-wire control operation 4: Forward rotation jogging 5: Reverse rotation jogging</p> | 1 | |
| P05.02 | S2 terminal function selection | | 4 | |


| Function code | Name | Detailed description of parameters | Default value | Modify | | | | | | | | | | |
|---------------|---|--|---------------|--------|------|------|------|----|----|----|----|----|-------|--|
| P05.03 | S3 terminal function selection | 6: Coast to stop 7: Fault reset 8: Operation pause | 7 | | | | | | | | | | | |
| P05.04 | S4 terminal function selection | 9: External fault input 10: Increasing frequency setting(UP) 11: Decreasing frequency setting(DOWN) 12: Cancel the frequency change setting | 0 | | | | | | | | | | | |
| P05.05 | S5 terminal function selection | 13: Shift between A setting and B setting 14: Shift between combination setting and A setting 15: Shift between combination setting and B setting 16: Multi-stage speed terminal 1 17: Multi-stage speed terminal 2 18: Multi-stage speed terminal 3 19: Multi-stage speed terminal 4 20: Multi-stage speed pause 21: ACC/DEC time option 1 25: PID control pause 26: Traverse Pause(stop at the current frequency) 27: Traverse reset(return to the center frequency) 28: Counter reset 30: ACC/DEC prohibition 31: Counter trigger 33: Cancel the frequency change setting temporarily 34: DC brake 36: Shift the command to the keypad 37: Shift the command to the terminals 38: Shift the command to the communication | 0 | | | | | | | | | | | |
| P05.10 | Polarity selection of the input terminals | <p>The function code is used to set the polarity of the input terminals.</p> <p>Set the bit to 0, the input terminal is positive polarity.</p> <p>Set the bit to 1, the input terminal is negative polarity.</p> <table border="1"> <tr> <td>BIT4</td><td>BIT3</td><td>BIT2</td><td>BIT1</td><td>BIT0</td></tr> <tr> <td>S5</td><td>S4</td><td>S3</td><td>S2</td><td>S1</td></tr> </table> <p>Setting range: 0x000–0x1F</p> | BIT4 | BIT3 | BIT2 | BIT1 | BIT0 | S5 | S4 | S3 | S2 | S1 | 0x000 | |
| BIT4 | BIT3 | BIT2 | BIT1 | BIT0 | | | | | | | | | | |
| S5 | S4 | S3 | S2 | S1 | | | | | | | | | | |
| P05.11 | Switch filter time | Set the sample filter time of S1–S5. If the interference is strong, increase the parameter to avoid the disoperation. 0.000–1.000s | 0.010s | | | | | | | | | | | |

| Function code | Name | Detailed description of parameters | Default value | Modify | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|---------------|--------------------------------|---|-------------------|--------|-----------------|-----|-----|----------|----|-----|-----------------|-----|----|-----------------|----|----|---------|-----|-----|-----------------|-----|-----|-----------|----|-----|-----------------|-----|----|-----------|----|----|-----------------|-----|-----|--------------------|-------------------|----|--------|---------|---------|---------|---------|----|--------|---------|---------|---------|---------|--------|----|--------------------|--|-----|---|--|
| P05.12 | Virtual terminals setting | Enable the input function of virtual terminals at the communication mode. 0:Virtual terminals is invalid 1:MODBUS communication virtual terminals are valid | 0 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| P05.13 | Terminals control running mode | <p>Set the operation mode of the terminals control 0:2-wire control 1, comply the enable with the direction. This mode is widely used. It determines the rotation direction by the defined FWD and REV terminals command.</p> <div><div><div>K1</div><div>K2</div><div>COM</div></div><div><div>FWD</div><div>REV</div><div>COM</div></div></div> <table><tr><td>FWD</td><td>REV</td><td>Running command</td></tr><tr><td>OFF</td><td>OFF</td><td>Stopping</td></tr><tr><td>ON</td><td>OFF</td><td>Forward running</td></tr><tr><td>OFF</td><td>ON</td><td>Reverse running</td></tr><tr><td>ON</td><td>ON</td><td>Hold on</td></tr></table> <p>1:2-wire control 2. Separate the enable from the direction. FWD defined by this mode is the enabling ones.</p> <div><div><div>K1</div><div>K2</div><div>COM</div></div><div><div>FWD</div><div>REV</div><div>COM</div></div></div> <table><tr><td>FWD</td><td>REV</td><td>Running command</td></tr><tr><td>OFF</td><td>OFF</td><td>Stopping.</td></tr><tr><td>ON</td><td>OFF</td><td>Forward running</td></tr><tr><td>OFF</td><td>ON</td><td>Stopping.</td></tr><tr><td>ON</td><td>ON</td><td>Reverse running</td></tr></table> <p>The direction depends on the state of the defined REV.</p> <table><tr><th>SIn</th><th>REV</th><th>Previous direction</th><th>Current direction</th></tr><tr><td rowspan="2">ON</td><td rowspan="2">OFF→ON</td><td>Forward</td><td>Reverse</td></tr><tr><td>Reverse</td><td>Forward</td></tr><tr><td rowspan="2">ON</td><td rowspan="2">ON→OFF</td><td>Reverse</td><td>Forward</td></tr><tr><td>Forward</td><td>Reverse</td></tr><tr><td rowspan="2">ON→OFF</td><td>ON</td><td colspan="2" rowspan="2">Decelerate to stop</td></tr><tr><td>OFF</td></tr></table> <p>2:3-wire control 1; Sin is the enabling terminal in this mode, and the running command is caused by FWD and the direction is controlled by REV. Sin is natural closed.</p> | FWD | REV | Running command | OFF | OFF | Stopping | ON | OFF | Forward running | OFF | ON | Reverse running | ON | ON | Hold on | FWD | REV | Running command | OFF | OFF | Stopping. | ON | OFF | Forward running | OFF | ON | Stopping. | ON | ON | Reverse running | SIn | REV | Previous direction | Current direction | ON | OFF→ON | Forward | Reverse | Reverse | Forward | ON | ON→OFF | Reverse | Forward | Forward | Reverse | ON→OFF | ON | Decelerate to stop | | OFF | 0 | |
| FWD | REV | Running command | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| OFF | OFF | Stopping | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| ON | OFF | Forward running | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| OFF | ON | Reverse running | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| ON | ON | Hold on | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| FWD | REV | Running command | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| OFF | OFF | Stopping. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| ON | OFF | Forward running | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| OFF | ON | Stopping. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| ON | ON | Reverse running | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| SIn | REV | Previous direction | Current direction | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| ON | OFF→ON | Forward | Reverse | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | Reverse | Forward | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| ON | ON→OFF | Reverse | Forward | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | Forward | Reverse | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| ON→OFF | ON | Decelerate to stop | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | OFF | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
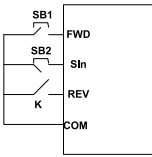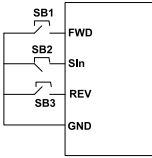
| Function code | Name | Detailed description of parameters | Default value | Modify | | | | | | | | | | | | | | | | | | | | | | | |
|---------------|--------------------------------------|---|--------------------|--------|-----|-----------|----|--------|----|---------|-----|---------|----|----|--------|---------|-----|---------|-----|--|--|--------------------|-----|--|--|--|--|
| | | <div></div> <p>3:3-wire control 2; Sin is the enabling terminal on this mode, if set Si (i=1 ~ 5) to 3, when K is switched on, the control of FWD and REV is valid; when K is switched off, the control of FWD and REV is invalid. The VFD stops.</p> <div></div> <table border="1"><thead><tr><th>Sin</th><th>FWD</th><th>REV</th><th>Direction</th></tr></thead><tbody><tr><td rowspan="2">ON</td><td rowspan="2">OFF→ON</td><td>ON</td><td>Forward</td></tr><tr><td>OFF</td><td>Reverse</td></tr><tr><td rowspan="2">ON</td><td>ON</td><td rowspan="2">OFF→ON</td><td>Forward</td></tr><tr><td>OFF</td><td>Reverse</td></tr><tr><td>ON→</td><td></td><td></td><td rowspan="2">Decelerate to stop</td></tr><tr><td>OFF</td><td></td><td></td></tr></tbody></table> <p>Note: for the 2-wire running mode, when FWD/REV terminal is valid, the VFD stop because of the stopping command from other sources, even the control terminal FWD/REV keeps valid; the VFD won't work when the stopping command is canceled. Only when FWD/REV is relaunched, the VFD can start again.</p> | Sin | FWD | REV | Direction | ON | OFF→ON | ON | Forward | OFF | Reverse | ON | ON | OFF→ON | Forward | OFF | Reverse | ON→ | | | Decelerate to stop | OFF | | | | |
| Sin | FWD | REV | Direction | | | | | | | | | | | | | | | | | | | | | | | | |
| ON | OFF→ON | ON | Forward | | | | | | | | | | | | | | | | | | | | | | | | |
| | | OFF | Reverse | | | | | | | | | | | | | | | | | | | | | | | | |
| ON | ON | OFF→ON | Forward | | | | | | | | | | | | | | | | | | | | | | | | |
| | OFF | | Reverse | | | | | | | | | | | | | | | | | | | | | | | | |
| ON→ | | | Decelerate to stop | | | | | | | | | | | | | | | | | | | | | | | | |
| OFF | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| P05.14 | S1 terminal switching on delay time | The function code defines the corresponding delay time of electrical level of the programmable terminals from switching on to switching off. | 0.000s | | | | | | | | | | | | | | | | | | | | | | | | |
| P05.15 | S1 terminal switching off delay time | | 0.000s | | | | | | | | | | | | | | | | | | | | | | | | |
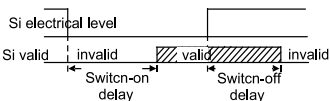
| Function code | Name | Detailed description of parameters | Default value | Modify |
|---------------|---|---|---------------|--------|
| P05.16 | S2 terminal switching on delay time |  <p>Setting range: 0.000–50.000s</p> | 0.000s | |
| P05.17 | S2 terminal switching off delay time | | 0.000s | |
| P05.18 | S3 terminal switching on delay time | | 0.000s | |
| P05.19 | S3 terminal switching off delay time | | 0.000s | |
| P05.20 | S4 terminal switching on delay time | | 0.000s | |
| P05.21 | S4 terminal switching off delay time | | 0.000s | |
| P05.22 | S5 terminal switching on delay time | | 0.000s | |
| P05.23 | S5 terminal switching off delay time | | 0.000s | |
| P05.32 | Lower limit of AI1 | <p>The function code defines the relationship between the analog input voltage and its corresponding set value. If the analog input voltage beyond the set minimum or maximum input value, the VFD will count at the minimum or maximum one.</p> <p>When the analog input is the current input, the</p> | 0.00V | |
| P05.33 | Corresponding setting of the lower limit of AI1 | | 0.0% | |

| Function code | Name | Detailed description of parameters | Default value | Modify |
|-------------------------------|---|---|---------------|--------|
| P05.34 | Upper limit of AI1 | <p>corresponding voltage of 0–20mA is 0–10V. In different cases, the corresponding rated value of 100.0% is different. See the application for detailed information. The figure below illustrates different applications:</p> <p>Input filter time: this parameter is used to adjust the sensitivity of the analog input. Increasing the value properly can enhance the anti-interference of the analog, but weaken the sensitivity of the analog input.</p> <p>Note: AI2 can support 0–10V or 0–20mA input, when AI2 selects 0–20mA input, the corresponding voltage of 20mA is 5V.</p> <p>Setting range of P05.32:0.00V–P05.34 Setting range of P05.33:-100.0%–100.0% Setting range of P05.34:P05.32–10.00V Setting range of P05.35:-100.0%–100.0% Setting range of P05.36:0.000s–10.000s Setting range of P05.37:0.00V–P05.39 Setting range of P05.38:-100.0%–100.0% Setting range of P05.39:P05.37–10.00V Setting range of P05.40:-100.0%–100.0% Setting range of P05.41:0.000s–10.000s</p> | 10.00V | |
| P05.35 | Corresponding setting of the upper limit of AI1 | | 100.0% | |
| P05.36 | AI1 input filter time | | 0.100s | |
| P05.37 | Lower limit of AI2 | | 0.00V | |
| P05.38 | Corresponding setting of the lower limit of AI2 | | 0.0% | |
| P05.39 | Upper limit of AI2 | | 10.00V | |
| P05.40 | Corresponding setting of the upper limit of AI2 | | 100.0% | |
| P05.41 | AI2 input filter time | | 0.100s | |
| P06 group Output terminals | | | | |
| P06.01 | Y output selection | 0:Invalid 1:On operation 2:Forward rotation operation 3:Reverse rotation operation 4: Jogging operation 5:The VFD fault | 0 | |
| P06.03 | Relay RO output | | 1 | |
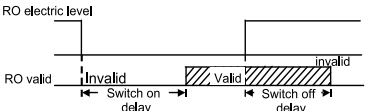
| Function code | Name | Detailed description of parameters | Default value | Modify | | | | | | | | |
|---------------|------------------------------|---|---------------|--------|------|------|----------|-----|----------|---|----|--|
| | | 6:Frequency degree test FDT1 7:Frequency degree test FDT2 8:Frequency arrival 9:Zero speed running 10:Upper limit frequency arrival 11:Lower limit frequency arrival 12:Ready for operation 14:Overload pre-alarm 15: Underload pre-alarm 16:Completion of simple PLC stage 17:Completion of simple PLC cycle 18:Setting count value arrival 19:Defined count value arrival 20:External fault valid 22:Running time arrival 23:MODBUS communication virtual terminals output | | | | | | | | | | |
| P06.05 | Polarity of output terminals | The function code is used to set the pole of the output terminal. When the current bit is set to 0, input terminal is positive. When the current bit is set to 1, input terminal is negative. <table><tr><td>BIT3</td><td>BIT2</td><td>BIT1</td><td>BIT0</td></tr><tr><td>Reserved</td><td>RO1</td><td>Reserved</td><td>Y</td></tr></table> Setting range:00—0F | BIT3 | BIT2 | BIT1 | BIT0 | Reserved | RO1 | Reserved | Y | 00 | |
| BIT3 | BIT2 | BIT1 | BIT0 | | | | | | | | | |
| Reserved | RO1 | Reserved | Y | | | | | | | | | |
| P06.06 | Y switching on delay time | 0.000—50.000s | 0.000s | | | | | | | | | |
| P06.07 | Y switching off delay time | 0.000—50.000s | 0.000s | | | | | | | | | |
| P06.10 | RO switching on delay time | The function code defines the corresponding delay time of the electrical level change during the programmable terminal switching on and off. | 0.000s | | | | | | | | | |
| P06.11 | RO switching off delay time | <p>RO electric level</p>  <p>Setting range :0.000—50.000s</p> | 0.000s | | | | | | | | | |
| P06.14 | AO output | 0:Running frequency | 0 | | | | | | | | | |

| Function code | Name | Detailed description of parameters | Default value | Modify |
|---------------|--|--|---------------|--------|
| | | 1:Set frequency 2:Ramp reference frequency 3:Running rotation speed (relative to twice the rotating speed of the motor) 4:Output current (relative to twice the rated current of the VFD) 5:Output current (relative to twice the rated current of the motor) 6:Output voltage (relative to 1.5 times the rated voltage of the VFD) 7:Output power (relative to twice the rated power of the motor) 8:Set torque value (relative to twice the rated torque of the motor) 9:Output torque 10:Analog AI1 input value 11:Analog AI2 input value 14:MODBUS communication set value 1 15:MODBUS communication set value 2 | | |
| P06.17 | Lower limit of AO output | The above function codes define the relative relationship between the output value and analog output. When the output value exceeds the range of set maximum or minimum output, it will count according to the low-limit or upper-limit output. When the analog output is current output, 1mA equals to 0.5V. In different cases, the corresponding analog output of 100% of the output value is different. <div data-bbox="367 1067 733 1253"> </div> | 0.0% | |
| P06.18 | Corresponding AO output to the lower limit | | 0.00V | |
| P06.19 | Upper limit of AO output | | 100.0% | |
| P06.20 | The corresponding AO output to the upper limit | | 10.00V | |
| P06.21 | AO output filter time | | 0.000s | |
| | | Setting range of P06.17 0.0%—P06.19 Setting range of P06.18 0.00V—10.00V Setting range of P06.19 P06.17—100.0% | | |

| Function code | Name | Detailed description of parameters | Default value | Modify |
|--|---------------------------|---|---------------|--------|
| | | Setting range of P06.20 0.00V–10.00V Setting range of P06.21 0.000s–10.000s | | |
| P07 group Human-machine interface | | | | |
| P07.00 | User's password | <p>0–65535</p> <p>The password protection will be valid when setting any non-zero number.</p> <p>00000: Clear the previous user's password, and make the password protection invalid.</p> <p>After the user's password becomes valid, if the password is incorrect, users cannot enter the parameter menu. Only correct password can make the user check or modify the parameters. Please remember all users' passwords.</p> <p>Retreat editing state of the function codes and the password protection will become valid in 1 minute. If the password is available, press PRG/ESC to enter into the editing state of the function codes, and then "0.0.0.0.0" will be displayed. Unless input right password, the operator can not enter into it.</p> <p>Note: restoring to the default value can clear the password, please use it with caution.</p> | 0 | |
| P07.02 | QUICK/JOG function | <p>0: No function</p> <p>1: Jogging running. Press QUICK/JOG to start jogging running.</p> <p>2: Shift the display state by the shifting key. Press QUICK/JOG to shift the displayed function code from right to left.</p> <p>3: Shift between forward rotations and reverse rotations. Press QUICK/JOG to shift the direction of the frequency commands. This function is only valid in the keypad commands channels.</p> <p>4: Clear UP/DOWN settings. Press QUICK/JOG to clear the set value of UP/DOWN.</p> <p>5: Coast to stop. Press QUICK/JOG to coast to stop.</p> <p>6: Shift the running commands source. Press QUICK/JOG to shift the running commands source.</p> <p>7: Quick commission mode(committee according to the</p> | 1 | |

| Function code | Name | Detailed description of parameters | Default value | Modify |
|---------------|--|--|---------------|--------|
| | | non-factory parameter) Note: Press QUICK/JOG to shift between forward rotation and reverse rotation, the VFD does not record the state after shifting during powering off. The VFD will run according to parameter P00.13 during next powering on. | | |
| P07.03 | QUICK/JOG the shifting sequence selection of running command | When P07.02=6, set the shifting sequence of running command channels. 0:Keypad control→terminals control →communication control 1:Keypad control←→terminals control 2:Keypad control←→communication control 3:Terminals control←→communication control | 0 | |
| P07.04 | STOP/RST stop function | Select the stop function by STOP/RST . STOP/RST is valid in any state for the fault reset. 0:Only valid for the panel control 1:Both valid for panel and terminals control 2:Both valid for panel and communication control 3:Valid for all control modes | 0 | |
| P07.05 | The parameter selection1 of running state | 0x0000–0xFFFF BIT0:running frequency (Hz on) BIT1:set frequency(Hz flickering) BIT2:bus voltage (Hz on) BIT3:output voltage(V on) BIT4:output current(A on) BIT5:running rotation speed (rpm on) BIT6:output power(% on) BIT7:output torque(% on) BIT8:PID reference(% flickering) BIT9:PID feedback value(% on) BIT10:input terminals state BIT11:output terminals state BIT12:torque set value(% on) BIT13:pulse counter value BIT14:length value BIT15:current stage in multi-stage speed | 0x03FF | |


| Function code | Name | Detailed description of parameters | Default value | Modify |
|---------------|--|---|---------------|--------|
| P07.06 | The parameter selection 2 of running state | 0x0000–0xFFFF BIT0: analog AI1 value (V on) BIT1: analog AI2 value (V on) BIT4: motor overload percentage (% on) BIT5: the VFD overload percentage (% on) BIT6: ramp frequency reference value(Hz on) BIT7: linear speed | 0x0000 | |
| P07.07 | The parameter selection of the stop state | 0x0000–0xFFFF BIT0:set frequency(Hz on, frequency flickering slowly) BIT1:bus voltage (V on) BIT2:input terminals state BIT3:output terminals state BIT4:PID reference (% flickering) BIT5:PID feedback value(% on) BIT7:analog AI1 value(V on) BIT8:analog AI2 value(V on) BIT11:current stage in multi-stage speed BIT12:pulse counters | 0x00FF | |
| P07.08 | Frequency display coefficient | 0.01–10.00 Displayed frequency=running frequency* P07.08 | 1.00 | |
| P07.09 | Rotation speed coefficient | 0.1–999.9% Mechanical rotation speed =120*displayed running frequency*P07.09/motor pole pairs | 100.0% | |
| P07.10 | Linear speed displayed coefficient | 0.1–999.9% Linear speed= Mechanical rotation speed*P07.10 | 1.0% | |
| P07.11 | Reserved | | | . |
| P07.12 | Inverter module temperature | -20.0–120.0℃ | | . |
| P07.13 | Software version | 1.00–655.35 | | . |


| Function code | Name | Detailed description of parameters | Default value | Modify |
|---------------|---------------------------------|------------------------------------|---------------|--------|
| P07.14 | Local accumulative running time | 0—65535h | | . |
| P07.18 | The rated power of the VFD | 0.4—3000.0kW | | . |
| P07.19 | The rated voltage of the VFD | 50—1200V | | . |
| P07.20 | The rated current of the VFD | 0.1—6000.0A | | . |
| P07.21 | Factory bar code 1 | 0x0000—0xFFFF | | . |
| P07.22 | Factory bar code 2 | 0x0000—0xFFFF | | . |
| P07.23 | Factory bar code 3 | 0x0000—0xFFFF | | . |
| P07.24 | Factory bar code 4 | 0x0000—0xFFFF | | . |
| P07.25 | Factory bar code 5 | 0x0000—0xFFFF | | . |
| P07.26 | Factory bar code 6 | 0x0000—0xFFFF | | . |
| P07.27 | Current fault type | 0:No fault 4:OC1 5:OC2 | | . |



| Function code | Name | Detailed description of parameters | Default value | Modify |
|---------------|---|---|---------------|--------|
| P07.28 | Previous fault type | 6:OC3 7:OV1 8:OV2 9:OV3 10:UV | | . |
| P07.29 | Previous 2 fault type | 11:Motor overload (OL1) 12: VFD overload (OL2) | | . |
| P07.30 | Previous 3 fault type | 15:Overheat of the rectifier module(OH1) 16:Overheat fault of the inverter module (OH2) 17:External fault(EF) | | . |
| P07.31 | Previous 4 fault type | 18:485 communication fault(CE) 21:EEPROM operation fault(EEP) 22:PID response offline fault(PIDE) | | . |
| P07.32 | Previous 5 fault type | 24:Running time arrival(END) 25:Electrical overload(OL3) 36: Undervoltage fault(LL) | | . |
| P07.33 | Current fault running frequency | | 0.00Hz | . |
| P07.34 | Ramp reference frequency at current fault | | 0.00Hz | . |
| P07.35 | Output voltage at current fault | | 0V | . |
| P07.36 | Output current at current fault | | 0.0A | . |
| P07.37 | Bus voltage at current fault | | 0.0V | . |
| P07.38 | Highest temperature at current fault | | 0.0C | . |
| P07.39 | Input terminal | | 0 | . |

| Function code | Name | Detailed description of parameters | Default value | Modify |
|---------------|--|------------------------------------|---------------|--------|
| | state at current fault | | | |
| P07.40 | Output terminal state at current fault | | 0 | . |
| P07.41 | Previous fault running frequency | | 0.00Hz | . |
| P07.42 | Ramp reference frequency at previous fault | | 0.00Hz | . |
| P07.43 | Output voltage at the previous fault | | 0V | . |
| P07.44 | The output current at the previous fault | | 0.0A | . |
| P07.45 | Bus voltage at the previous fault | | 0.0V | . |
| P07.46 | Highest temperature at the previous fault | | 0.0 °C | . |
| P07.47 | Input terminals state at the previous fault | | 0 | . |
| P07.48 | Output terminals state at the previous fault | | 0 | . |

| Function code | Name | Detailed description of parameters | Default value | Modify |
|------------------------------------|---|---|-----------------|--------|
| P07.49 | Previous 2 fault running frequency | | 0.00Hz | . |
| P07.50 | Ramp reference frequency at the previous 2 faults | | 0.00Hz | . |
| P07.51 | Output current at the previous 2 faults | | 0V | . |
| P07.52 | Output current at the previous 2 fault | | 0.0A | . |
| P07.53 | Bus voltage at the previous 2 fault | | 0.0V | . |
| P07.54 | Highest temperature at previous 2 fault | | 0.0 °C | . |
| P07.55 | Input terminals state at previous 2 fault | | 0 | . |
| P07.56 | Output terminals state at previous 2 fault | | 0 | . |
| P08 group Enhanced function | | | | |
| P08.00 | ACC time 2 | Refer to P00.11 and P00.12 for detailed definition. Goodrive10 series define four groups of ACC/DEC time which can be selected by P5 group. The first group of ACC/DEC time is the factory default one. | Depend on model | |
| P08.01 | DEC time 2 | | Depend on model | |
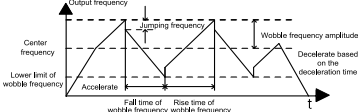
| Function code | Name | Detailed description of parameters | Default value | Modify |
|---------------|--------------------------------|---|-----------------|--------|
| | | Setting range:0.0–3600.0s | | |
| P08.06 | Jogging running frequency | This parameter is used to define the reference frequency during jogging. Setting range: 0.00Hz –P00.03(the Max. frequency) | 5.00Hz | |
| P08.07 | Jogging running ACC time | The jogging ACC time means the time needed if the VFD runs from 0Hz to the Max. Frequency. | Depend on model | |
| P08.08 | Jogging running DEC time | The jogging DEC time means the time needed if the VFD goes from the Max. Frequency (P0.03) to 0Hz. Setting range:0.0–3600.0s | Depend on model | |
| P08.15 | Traverse range | This function applies to the industries where traverse and convolution function are required such as textile and chemical fiber. | 0.0% | |
| P08.16 | Sudden jumping frequency range | The traverse function means that the output frequency of the VFD is fluctuated with the set frequency as its center. The route of the running frequency is illustrated as below, of which the traverse is set by P08.15 and when P08.15 is set as 0, the traverse is 0 with no function. | 0.0% | |
| P08.17 | Traverse boost time | | 5.0s | |
| P08.18 | Traverse declining time |  <p>Traverse range: The traverse running is limited by upper and low frequency.</p> <p>The traverse range relative to the center frequency: $\text{traverse range AW} = \text{center frequency} \times \text{traverse range P08.15}$.</p> <p>Sudden jumping frequency = $\text{traverse range AW} \times \text{sudden jumping frequency range P08.16}$. When run at the traverse frequency, the value which is relative to the sudden jumping frequency.</p> <p>The raising time of the traverse frequency: The time from the lowest point to the highest one.</p> | 5.0s | |
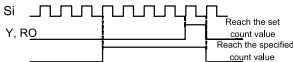
| Function code | Name | Detailed description of parameters | Default value | Modify |
|---------------|--|--|---------------|--------|
| | | <p>The declining time of the traverse frequency: The time from the highest point to the lowest one.</p> <p>Setting range of P08.15: 0.0–100.0%(relative to the set frequency)</p> <p>Setting range of P08.16: 0.0–50.0%(relative to the traverse range)</p> <p>Setting range of P08.17: 0.1–3600.0s</p> <p>Setting range of P08.18: 0.1–3600.0s</p> | | |
| P08.25 | Setting counting value | The counter works by the input pulse signals of the HDI terminals. | 0 | |
| P08.26 | Given counting value | <p>When the counter achieves a given number, the multi-function output terminals will output the signal of “fixed counting number arrival” and the counter go on working; when the counter achieves a setting number, the multi-function output terminals will output the signal of “setting counting number arrival”, the counter will clear all numbers and stop to recount before the next pulse.</p> <p>The setting counting value P08.26 should be no more than the setting counting value P08.25.</p> <p>The function is illustrated as below:</p>  <p>Setting range of P08.25:P08.26–65535</p> <p>Setting range of P08.26:0–P08.25</p> | 0 | |
| P08.27 | Setting running time | <p>Pre-set running time of the VFD. When the accumulative running time achieves the set time, the multi-function digital output terminals will output the signal of “running time arrival”.</p> <p>Setting range:0–65535min</p> | 0m | |
| P08.28 | Time of fault reset | The time of the fault reset: set the fault reset time by selecting this function. If the reset time exceeds this set value, the VFD will stop for the fault and wait to be repaired. | 0 | |
| P08.29 | Interval time of automatic fault reset | The interval time of the fault reset: The interval between the time when the fault occurs and the time when the reset action occurs. | 1.0s | |

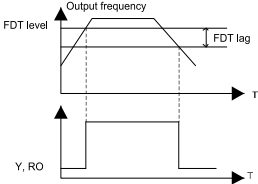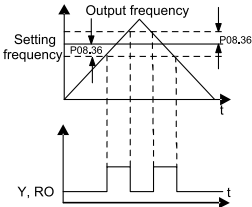
| Function code | Name | Detailed description of parameters | Default value | Modify |
|---------------|---|--|---------------|--------|
| | | Setting range of P08.28:0–10 Setting range of P08.29:0.1–3600.0s | | |
| P08.32 | FDT electrical level detection value | When the output frequency exceeds the corresponding frequency of FDT electrical level, the multi-function digital output terminals will output the signal of "frequency level detect FDT" until the output frequency decreases to a value lower than (FDT electrical level—FDT retention detection value) the corresponding frequency, the signal is invalid. Below is the waveform diagram: | 50.00Hz | |
| P08.33 | FDT retention detection value |  <p>Setting range of P08.32: 0.00Hz–P00.03(the Max. frequency) Setting range of P08.33: 0.0–100.0%(FDT electrical level)</p> | 5.0% | |
| P08.36 | Amplitude value for frequency arrival detection | <p>When the output frequency is among the below or above range of the set frequency, the multi-function digital output terminal will output the signal of "frequency arrival", see the diagram below for detailed information:</p>  <p>Setting range:0.00Hz–P00.03(the Max. frequency)</p> | 0.00Hz | |


| Function code | Name | Detailed description of parameters | Default value | Modify |
|---------------|----------------------------------|---|----------------------------|--------|
| P08.37 | Energy Braking enable | This parameter is used to control the internal braking pipe. 0:Disabled 1:Enabled Note: Only applied to internal braking pipe. | 0 | |
| P08.38 | Energy Braking threshold voltage | After setting the original bus voltage to brake the energy, adjust the voltage appropriately to brake the load. The factory changes with the voltage level. Setting range:200.0 – 2000.0V | 220V voltage: 380.0V | |
| | | | 380V voltage: 700.0V | |
| P08.39 | Cooling fan running mode | 0:Rated running mode 1:The fan keeps on running after power on | 0 | |
| P08.40 | PWM selection | 0x0000–0x0021 LED ones: PWM mode selection 0: PWM mode 1, Three-phase modulation and two-phase modulation 1: PWM mode 2, Three-phase modulation LED tens: low-speed carrier frequency limit 0: low-speed carrier frequency limit mode 1; when the carrier frequency exceeds 1k at low speed, limit to 1k. 1: low-speed carrier frequency limit mode 2; when the carrier frequency exceeds 2k at low speed, limit to 2k. 2: No limit for the carrier frequency at low speed | 0x01 | |
| P08.41 | Over commission selection | 0:Invalid 1:Valid | 1 | |
| P08.42 | Keypad data control setting | 0x000–0x1223 LED ones: frequency enable selection 0:△/▽ keys adjustments are valid 1:Reserved 2: △/▽ keys adjustments are invalid 3: Reserved LED tens: frequency control selection 0:Only valid when P00.06=0 or P00.07=0 1:Valid for all frequency setting manner 2:Invalid for multi-stage speed when multi-stage speed has the priority LED hundreds: action selection during stopping | 0x0000 | |

| Function code | Name | Detailed description of parameters | Default value | Modify |
|---------------|--|---|---------------|--------|
| | | 0:Setting is valid 1:Valid during running, cleared after stopping 2:Valid during running, cleared after receiving the stop command LED thousands: \wedge/\vee keys and digital potentiometer Integral function 0:The Integral function is valid 1:The Integral function is invalid | | |
| P08.44 | UP/DOWN terminals control setting | 0x00–0x221 LED ones: frequency enabling selection 0:UP/DOWN terminals setting valid 1:UP/DOWN terminals setting invalid LED tens: frequency control selection 0:Only valid when P00.06=0 or P00.07=0 1:All frequency means are valid 2:When the multi-stage are priority, it is invalid to the multi-stage LED hundreds: action selection when stop 0:Setting valid 1:Valid in the running, clear after stop 2:Valid in the running, clear after receiving the stop commands | 0x000 | |
| P08.45 | UP terminal frequency increasing integral ratio | 0.01–50.00 Hz/s | 0.50 Hz/s | |
| P08.46 | DOWN terminal frequency decreasing integral ratio | 0.01–50.00 Hz/s | 0.50 Hz/s | |
| P08.47 | Action selection for frequency settings on power off | 0x000–0x111 LED ones: Action for digital adjustable frequency on power off 0: Save on power off 1: Clear on power off LED tens: Action for MODBUS frequency setting on power off 0: Save on power off 1: Clear on power off | 0x000 | |

| Function code | Name | Detailed description of parameters | Default value | Modify |
|------------------------------|--------------------------------|---|---------------|--------|
| | | LED hundreds: Action for other-mode frequency setting on power off 0: Save on power off 1: Clear on power off | | |
| P08.50 | Magnetic flux braking | This function code is used to enable magnetic flux. 0: Invalid. 100 - 150: the bigger the coefficient, the bigger the braking strength. This VFD can slow down the motor by increasing the magnetic flux. The energy generated by the motor during braking can be transformed into heat energy by increasing the magnetic flux. The VFD monitors the state of the motor continuously even during the magnetic flux period. So the magnetic flux can be used in the motor stop, as well as to change the rotation speed of the motor. Its other advantages are: Brake immediately after the stop command. It does not need to wait the magnetic flux weaken. The cooling is better. The current of the stator other than the rotor increases during magnetic flux braking, while the cooling of the stator is more valid than the rotor. | 0 | |
| P09 group PID control | | | | |
| P09.00 | PID reference source selection | When the frequency command selection (P00.06, P00.07) is 7, the running mode of the VFD is procedure PID control. The parameter determines the target reference channel during the PID procures. 0:Keypad digital reference(P09.01) 1:Analog channel AI1 reference 2:Analog channel AI2 reference 5:Multi-stage speed set 6:MODBUS communication set The setting target of procedure PID is a relative one, 100% of the setting equals to 100% of the response of the controlled system. The system is calculated according to the relative value (0-100.0%). Note: Multi-stage speed reference, it is realized by setting P10 | 0 | |
| P09.01 | Keypad PID | When P09.00=0, set the parameter whose basic value is | 0.0% | |



| Function code | Name | Detailed description of parameters | Default value | Modify |
|---------------|-------------------------------|---|---------------|--------|
| | preset | the feedback value of the system. Setting range:-100.0%—100.0% | | |
| P09.02 | PID feedback source selection | Select the PID channel by the parameter. 1:Analog channel AI2 feedback 4:MODBUS communication feedback Note: The reference channel and the feedback channel can not coincide, otherwise, PID can not control validly. | 1 | |
| P09.03 | PID output feature selection | 0: PID output is positive: When the feedback signal exceeds the PID reference value, the output frequency of the VFD will decrease to balance the PID. For example, the strain PID control during wrapup 1: PID output is negative: When the feedback signal is stronger than the PID reference value, the output frequency of the VFD will increase to balance the PID. For example, the strain PID control during wrapdown | 0 | |
| P09.04 | Proportional gain (Kp) | The function is applied to the proportional gain P of PID input. P determines the strength of the whole PID adjuster. The parameter of 100 means that when the offset of PID feedback and reference value is 100%, the adjusting range of PID adjuster is the Max. Frequency (ignoring integral function and differential function). Setting range:0.00—100.00 | 1.00 | |
| P09.05 | Integral time(Ti) | This parameter determines the speed of PID adjuster to carry out integral adjustment on the deviation of PID feedback and reference. When the deviation of PID feedback and reference is 100%, the integral adjuster works continuously after the time (ignoring the proportional effect and differential effect) to achieve the Max. Frequency (P00.03) or the Max. Voltage (P04.31). Shorter the integral time, stronger is the adjustment Setting range: 0.01—10.00s | 0.10s | |
| P09.06 | Differential time(Td) | This parameter determines the strength of the change ratio when PID adjuster carries out integral adjustment on the deviation of PID feedback and reference. If the PID feedback changes 100% during the time, the adjustment of integral adjuster (ignoring the proportional effect and differential effect) is the Max. Frequency | 0.00s | |
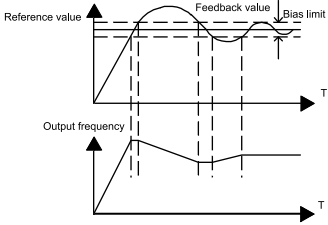
| Function code | Name | Detailed description of parameters | Default value | Modify |
|---------------|----------------------------------|--|---------------|--------|
| | | (P00.03). Longer the integral time, stronger is the adjusting. Setting range: 0.00–10.00s | | |
| P09.07 | Sampling cycle(T) | This parameter means the sampling cycle of the feedback. The modulator calculates in each sampling cycle. The longer the sapling cycle is, the slower the response is. Setting range: 0.00–100.00s | 0.10s | |
| P09.08 | PID control deviation limit | <p>As shown in the diagram below, PID adjustor stops to work during the deviation limit. Set the function properly to adjust the accuracy and stability of the system.</p>  <p>Setting range:0.0–100.0%</p> | 0.0% | |
| P09.09 | Output upper limit of PID | These parameters are used to set the upper and lower limit of the PID adjustor output. 100.0 % corresponds to Max. Frequency | 100.0% | |
| P09.10 | Output lower limit of PID | Setting range of P09.09: P09.10–100.0% Setting range of P09.10: -100.0%–P09.09 | 0.0% | |
| P09.11 | Feedback offline detection value | Set the PID feedback offline detection value, when the detection value is smaller than or equal to the feedback offline detection value, and the lasting time exceeds the set value in P09.12, the VFD will report "PID feedback offline fault" and the keypad will display PIDE. | 0.0% | |
| P09.12 | Feedback offline detection time | | 1.0s | |
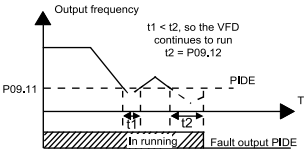
| Function code | Name | Detailed description of parameters | Default value | Modify |
|--|--------------------------|--|---------------|--------|
| | |  <p>Setting range of P09.11: 0.0–100.0%</p> <p>Setting range of P09.12: 0.0–3600.0s</p> | | |
| P09.13 | PID adjustment selection | <p>0x00–0x11</p> <p>LED ones:</p> <p>0: Keep on integral adjustment when the frequency achieves the upper and low limit; the integration shows the change between the reference and the feedback unless it reaches the internal integral limit. When the trend between the reference and the feedback changes, it needs more time to offset the impact of continuous working and the integration will change with the trend.</p> <p>1: Stop integral adjustment when the frequency reaches the upper and low limit. If the integration keeps stable, and the trend between the reference and the feedback changes, the integration will change with the trend quickly.</p> <p>LED tens:</p> <p>0: The same with the setting direction; if the output of PID adjustment is different from the current running direction, the internal will output 0 forcedly.</p> <p>1: Opposite to the setting direction</p> | 0x00 | |
| P10 group Simple PLC and multi-step speed control | | | | |
| P10.02 | Multi-step speed 0 | <p>100.0% of the frequency setting corresponds to the Max. Frequency P00.03.</p> <p>When selecting simple PLC running, set P10.02–P10.33 to define the running frequency and direction of all steps.</p> | 0.0% | |
| P10.04 | Multi-step speed 1 | <p>Note: The symbol of multi-step determines the running direction of simple PLC. The negative value means reverse</p> | 0.0% | |

| Function code | Name | Detailed description of parameters | Default value | Modify |
|---------------|---------------------|--|---------------|--------|
| P10.06 | Multi-step speed 2 | <p>rotation.</p> <p>Multi-step speeds are in the range of $-f_{max}$—f_{max} and it can be</p> <p>Goodrive10 series VFDs can set 16 steps speed, selected by the combination of multi-step terminals 1—4, corresponding to the speed 0 to speed 15.</p> <p>When terminal1= terminal 2= terminal 3= terminal 4=OFF, the frequency input manner is selected via code P00.06 or P00.07. When not all terminals are off, it runs at multi-step which takes precedence of keypad, analog value, high-speed pulse, PLC, communication frequency input. Select at most 16 steps speed via the combination code of terminals 1, 2, 3, and 4.</p> <p>The start-up and stopping of multi-step running is determined by function code P00.06, the relationship between terminals 1, 2, 3, and 4 and multi-step speed is as following:</p> | 0.0% | |
| P10.08 | Multi-step speed 3 | | 0.0% | |
| P10.10 | Multi-step speed 4 | | 0.0% | |
| P10.12 | Multi-step speed 5 | | 0.0% | |
| P10.14 | Multi-step speed 6 | | 0.0% | |
| P10.16 | Multi-step speed 7 | | 0.0% | |
| P10.18 | Multi-step speed 8 | | 0.0% | |
| P10.20 | Multi-step speed 9 | | 0.0% | |
| P10.22 | Multi-step speed 10 | | 0.0% | |
| P10.24 | Multi-step speed 11 | | 0.0% | |
| P10.26 | Multi-step speed 12 | | 0.0% | |
| P10.28 | Multi-step speed 13 | | 0.0% | |
| P10.30 | Multi-step speed 14 | | 0.0% | |

| Function code | Name | Detailed description of parameters | Default value | Modify | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|---|---|--|----------------|--------|------|---|------|------|-----------|-----|----|------------|-----|-----|----|----|-----|-----|----|----|------------|-----|-----|-----|-----|----|----|----|----|------------|-----|-----|-----|-----|-----|-----|-----|-----|------|---|---|---|---|---|---|---|---|------------|-----|----|-----|----|-----|----|-----|----|------------|-----|-----|----|----|-----|-----|----|----|------------|-----|-----|-----|-----|----|----|----|----|------------|----|----|----|----|----|----|----|----|------|---|---|----|----|----|----|----|----|------|--|
| P10.32 | Multi-step speed 15 | <table><tr><td>Terminal 1</td><td>OFF</td><td>ON</td><td>OFF</td><td>ON</td><td>OFF</td><td>ON</td><td>OFF</td><td>ON</td></tr><tr><td>Terminal 2</td><td>OFF</td><td>OFF</td><td>ON</td><td>ON</td><td>OFF</td><td>OFF</td><td>ON</td><td>ON</td></tr><tr><td>Terminal 3</td><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td><td>ON</td><td>ON</td><td>ON</td><td>ON</td></tr><tr><td>Terminal 4</td><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td></tr><tr><td>Step</td><td>0</td><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td></tr><tr><td>Terminal 1</td><td>OFF</td><td>ON</td><td>OFF</td><td>ON</td><td>OFF</td><td>ON</td><td>OFF</td><td>ON</td></tr><tr><td>Terminal 2</td><td>OFF</td><td>OFF</td><td>ON</td><td>ON</td><td>OFF</td><td>OFF</td><td>ON</td><td>ON</td></tr><tr><td>Terminal 3</td><td>OFF</td><td>OFF</td><td>OFF</td><td>OFF</td><td>ON</td><td>ON</td><td>ON</td><td>ON</td></tr><tr><td>Terminal 4</td><td>ON</td><td>ON</td><td>ON</td><td>ON</td><td>ON</td><td>ON</td><td>ON</td><td>ON</td></tr><tr><td>step</td><td>8</td><td>9</td><td>10</td><td>11</td><td>12</td><td>13</td><td>14</td><td>15</td></tr></table> <p>Setting range of P10.(2n,1<n<17): -100.0–100.0%</p> | Terminal 1 | OFF | ON | OFF | ON | OFF | ON | OFF | ON | Terminal 2 | OFF | OFF | ON | ON | OFF | OFF | ON | ON | Terminal 3 | OFF | OFF | OFF | OFF | ON | ON | ON | ON | Terminal 4 | OFF | OFF | OFF | OFF | OFF | OFF | OFF | OFF | Step | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | Terminal 1 | OFF | ON | OFF | ON | OFF | ON | OFF | ON | Terminal 2 | OFF | OFF | ON | ON | OFF | OFF | ON | ON | Terminal 3 | OFF | OFF | OFF | OFF | ON | ON | ON | ON | Terminal 4 | ON | ON | ON | ON | ON | ON | ON | ON | step | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 0.0% | |
| Terminal 1 | OFF | ON | OFF | ON | OFF | ON | OFF | ON | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Terminal 2 | OFF | OFF | ON | ON | OFF | OFF | ON | ON | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Terminal 3 | OFF | OFF | OFF | OFF | ON | ON | ON | ON | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Terminal 4 | OFF | OFF | OFF | OFF | OFF | OFF | OFF | OFF | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Step | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Terminal 1 | OFF | ON | OFF | ON | OFF | ON | OFF | ON | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Terminal 2 | OFF | OFF | ON | ON | OFF | OFF | ON | ON | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Terminal 3 | OFF | OFF | OFF | OFF | ON | ON | ON | ON | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Terminal 4 | ON | ON | ON | ON | ON | ON | ON | ON | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| step | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| P11 group Protection parameters | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| P11.01 | Sudden power loss frequency decreasing function selection | 0: Disable 1: Enable | 0 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| P11.02 | Frequency decreasing ratio of sudden power loss | <p>Setting range: 0.00Hz/s–P00.03 (the Max. frequency)</p> <p>After the power loss of the grid, the bus voltage drops to the sudden frequency-decreasing point, the VFD begin to decrease the running frequency at P11.02, to make the VFD generate power again. The returning power can maintain the bus voltage to ensure a rated running of the VFD until the recovery of power.</p> <table><tr><td>Voltage degree</td><td>220V</td><td>380V</td></tr><tr><td>Frequency-decreasing point of sudden power loss</td><td>260V</td><td>460V</td></tr></table> <p>Note:</p> <p>1. Adjust the parameter properly to avoid the stopping</p> | Voltage degree | 220V | 380V | Frequency-decreasing point of sudden power loss | 260V | 460V | 10.00Hz/s | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Voltage degree | 220V | 380V | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Frequency-decreasing point of sudden power loss | 260V | 460V | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
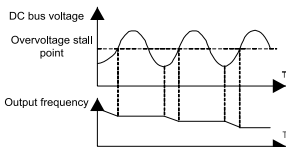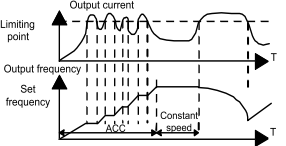
| Function code | Name | Detailed description of parameters | Default value | Modify |
|---------------|---|---|---------------|--------|
| | | caused by VFD protection during the switching of the grid. 2. Disable input phase loss protection to enable this function. | | |
| P11.03 | Overvoltage speed loss protection | 0:Disabled 1:Enabled  | 1 | |
| P11.04 | Overvoltage speed loss voltage protection | 120—150%(standard bus voltage)(380V) | 136% | |
| | | 120—150%(standard bus voltage)(220V) | 120% | |
| P11.05 | Current limit action selection | The actual increasing ratio is less than the ratio of output frequency because of the big load during ACC running. It is necessary to take measures to avoid overcurrent fault and the VFD trips. During the running of the VFD, this function will detect the output current and compare it with the limit level defined in P11.06. If it exceeds the level, the VFD will run at stable frequency in ACC running, or the VFD will derate to run during the constant running. If it exceeds the level continuously, the output frequency will keep on decreasing to the lower limit. If the output current is detected to be lower than the limit level, the VFD will accelerate to run. | 1 | |
| P11.06 | Automatic current limit level | | 160.0% | |
| P11.07 | The decreasing ratio during current limit | | 10.00Hz/s | |
| | |  | | |
| | | Setting range of P11.05: | | |

| Function code | Name | Detailed description of parameters | Default value | Modify |
|---------------|--|---|---------------|--------|
| | | 0:current limit invalid 1:current limit valid Setting range of P11.06:50.0–200.0% Setting range of P11.07:0.00–50.00Hz/s | | |
| P11.08 | Overload pre-alarm of the motor or the VFD | <p>The output current of the VFD or the motor is above P11.09 and the lasting time is beyond P11.10, overload pre-alarm will be output.</p> <p>Setting range of P11.08: Enable and define the overload pre-alarm of the VFD or the motor. Setting range: 0x000–0x131 LED ones: 0:Overload pre-alarm of the motor, comply with the rated current of the motor 1:Overload pre-alarm of the VFD, comply with the rated current of the VFD LED tens: 0:The VFD continues to work after underload pre-alarm 1:The VFD continues to work after underload pre-alarm and the VFD stops to run after overload fault 2: The VFD continues to work after overload pre-alarm and the VFD stops to run after underload fault 3. The VFD stops when overloading or underloading. LED hundreds : 0:Detection all the time 1:Detection in constant running</p> | 0x000 | |
| P11.09 | Overload pre-alarm test level | | 150% | |
| P11.10 | Overload pre-alarm detection time | | 1.0s | |

| Function code | Name | Detailed description of parameters | Default value | Modify |
|---------------------------------------|---|---|---------------|--------|
| | | Setting range of P11.09: P11.11–200% Setting range of P11.10: 0.1–60.0s | | |
| P11.11 | Detection level of the underload pre-alarm | If the VFD current or the output current is lower than P11.11, and its lasting time is beyond P11.12, the VFD will output underload pre-alarm. Setting range of P11.11: 0–P11.09 Setting range of P11.12: 0.1–60.0s | 50% | |
| P11.12 | Detection time of the underload pre-alarm | | 1.0s | |
| P11.13 | Output terminal action selection during fault | Select the action of fault output terminals on undervoltage and fault reset. 0x00–0x11 LED ones: 0:Action under fault undervoltage 1:No action under fault undervoltage LED tens: 0:Action during the automatic reset 1:No action during the automatic reset | 0x00 | |
| P14 group Serial communication | | | | |
| P14.00 | Local communication address | Setting range:1–247 When the master is writing the frame, the communication address of the slave is set to 0; the broadcast address is the communication address. All slaves on the MODBUS fieldbus can receive the frame, but the slave doesn't answer. The communication address of the drive is unique in the communication net. This is the fundamental for the point to point communication between the upper monitor and the drive. Note: The address of the slave cannot set to 0. | 1 | |

| Function code | Name | Detailed description of parameters | Default value | Modify |
|---------------|-----------------------------------|--|---------------|--------|
| P14.01 | Baud rate | <p>Set the digital transmission speed between the upper monitor and the VFD.</p> <p>0:1200BPS 1:2400BPS 2:4800BPS 3:9600BPS 4:19200BPS 5:38400BPS</p> <p>Note: The baud rate between the upper monitor and the VFD must be the same. Otherwise, the communication is not applied. The bigger the baud rate, the quicker the communication speed.</p> | 4 | |
| P14.02 | Digital bit checkout setting | <p>The data format between the upper monitor and the VFD must be the same. Otherwise, the communication is not applied.</p> <p>0: No check (N,8,1)for RTU 1: Even check (E,8,1) for RTU 2: Odd check (O,8,1) for RTU 3:No check (N,8,2) for RTU 4: Even check (E,8,2) for RTU 5: Odd check(O,8,2) for RTU</p> | 1 | |
| P14.03 | Communication response delay | <p>0—200ms</p> <p>It means the interval time between the interval time when the drive receive the data and sent it to the upper monitor. If the answer delay is shorter than the system processing time, then the answer delay time is the system processing time, if the answer delay is longer than the system processing time, then after the system deal with the data, waits until achieving the answer delay time to send the data to the upper monitor.</p> | 5 | |
| P14.04 | Communication overtime fault time | <p>0.0(invalid),0.1—60.0s</p> <p>When the function code is set as 0.0, the communication overtime parameter is invalid.</p> | 0.0s | |

| Function code | Name | Detailed description of parameters | Default value | Modify |
|---|---|---|---------------|--------|
| | | When the function code is set as non-zero, if the interval time between two communications exceeds the communication overtime, the system will report "485 communication faults" (CE). Generally, set it as invalid; set the parameter in the continuous communication to monitor the communication state. | | |
| P14.05 | Transmission fault processing | 0:Alarm and stop freely 1:No alarm and continue to run 2:No alarm and stop according to the stop means(only under the communication control) 3:No alarm and stop according to the stop means(under all control modes) | 0 | |
| P14.06 | Communication processing action selection | 0x00–0x11 LED ones: 0: Operation with response: the drive will respond to all reading and writing commands of the upper monitor. 1: Operation without response. The drive only responds to the reading command other than the writing command of the drive. The communication efficiency can be increased by this method. LED tens:(reserved) | 0x00 | |
| P17 group State viewing function | | | | |
| P17.00 | Set frequency | Display current set frequency of the VFD Range: 0.00Hz–P00.03 | 0.00Hz | |
| P17.01 | Output frequency | Display current output frequency of the VFD Range: 0.00Hz–P00.03 | 0.00Hz | |
| P17.02 | Ramp reference frequency | Display current ramp reference frequency of the VFD Range: 0.00Hz–P00.03 | 0.00Hz | |

| Function code | Name | Detailed description of parameters | Default value | Modify |
|---------------|---------------------------------|--|---------------|--------|
| P17.03 | Output voltage | Display current output voltage of the VFD Range: 0—1200V | 0V | . |
| P17.04 | Output current | Display current output current of the VFD Range: 0.0—5000.0A | 0.0A | . |
| P17.05 | The rotation speed of the motor | Display the rotation speed of the motor. Range: 0—65535RPM | 0 RPM | . |
| P17.08 | Motor power | Display current power of the motor. Setting range: -300.0%—300.0%(the rated current of the motor) | 0.0% | . |
| P17.09 | Output torque | Display the current output torque of the VFD. Range: -250.0—250.0% | 0.0% | . |
| P17.11 | DC bus voltage | Display current DC bus voltage of the VFD Range: 0.0—2000.0V | 0V | . |
| P17.12 | Switch input terminals state | Display current Switch input terminals state of the VFD Range: 0000—00FF | 0 | . |
| P17.13 | Switch output terminals state | Display current Switch output terminals state of the VFD Range: 0000—000F | 0 | . |
| P17.14 | Digital adjustment | Display the adjustment through the keypad of the VFD. Range : 0.00Hz—P00.03 | 0.00V | . |
| P17.18 | Counting value | Display the current counting number of the VFD. Range: 0—65535 | 0 | . |

| Function code | Name | Detailed description of parameters | Default value | Modify |
|---------------|--|---|---------------|--------|
| P17.19 | AI1 input voltage | Display analog AI1 input signal Range: 0.00–10.00V | 0.00V | . |
| P17.20 | AI2 input voltage | Display analog AI2 input signal Range: 0.00–10.00V | 0.00V | . |
| P17.23 | PID reference value | Display PID reference value Range: -100.0–100.0% | 0.0% | . |
| P17.24 | PID response value | Display PID response value Range: -100.0–100.0% | 0.0% | . |
| P17.25 | Power factor of the motor | Display the current power factor of the motor Range: -1.00–1.00 | | . |
| P17.26 | Current running time | Display the current running time of the VFD. Range: 0–65535min | 0m | . |
| P17.27 | Current stage of the multi-stage speed | Display simple PLC and the current stage of the multi-stage speed Range: 0–15 | 0 | . |
| P17.36 | Output torque | Display the output torque. Positive value is in the electromotion state, and negative is in the power generating state. Range : -3000.0Nm–3000.0Nm | 0 | . |
| P17.37 | Counting value of motor overload | 0 – 100 (100: OL1) | | . |

Chapter 6 Fault tracking

6.1 Fault prevention

This chapter describes how to perform preventive maintenance on the VFD.

6.1.1 Maintenance intervals

If installed in an appropriate environment, the VFD requires very little maintenance. The table lists the routine maintenance intervals recommended by IKON.

| Checking part | | Checking item | Checking method | Criterion |
|---------------------|----------------------------|---|--|--|
| Ambient environment | | Check the ambient temperature, humidity and vibration and ensure there is no dust, gas, oil fog and water drop. | Visual examination and instrument test | Conforming to the manual |
| | | Ensure there are no tools or other foreign or dangerous objects | Visual examination | There are no tools or dangerous objects. |
| Voltage | | Ensure the main circuit and control circuit are normal. | Measurement by multimeter | Conforming to the manual |
| Keypad | | Ensure the display is clear enough | Visual examination | The characters are displayed normally. |
| | | Ensure the characters are displayed totally | Visual examination | Conforming to the manual |
| Main circuit | Commonly used | Ensure the screws are tightened security | Tighten up | NA |
| | | Ensure there is no distortion, crackles, damage or color-changing caused by overheating and aging to the machine and insulator. | Visual examination | NA |
| | | Ensure there is no dust and dirtiness | Visual examination | NA Note: if the color of the copper blocks change, it does not mean that there is something wrong with the features. |
| | The lead of the conductors | Ensure that there is no distortion or color-changing of the conductors caused by overheating. | Visual examination | NA |

| Checking part | | Checking item | Checking method | Criterion |
|-----------------|--|---|--|--|
| | | Ensure that there are no crackles or color-changing of the protective layers. | Visual examination | NA |
| | Terminals seat | Ensure that there is no damage | Visual examination | NA |
| | Filter capacitors | Ensure that there is no weeping, color-changing, crackles and cassis expansion. | Visual examination | NA |
| | | Ensure the safety valve is in the right place. | Estimate the usage time according to the maintenance or measure the static capacity. | NA |
| | | If necessary, measure the static capacity. | Measure the capacity by instruments. | The static capacity is above or equal to the original value *0.85. |
| | Resistors | Ensure whether there is replacement and splitting caused by overheating. | Smelling and visual examination | NA |
| | | Ensure that there is no offline. | Visual examination or remove one ending to coagulate or measure with multimeters | The resistors are in $\pm 10\%$ of the standard value. |
| | Transformers and reactors | Ensure there is no abnormal vibration, noise and smelling, | Hearing, smelling and visual examination | NA |
| | Electromagnetism contactors and relays | Ensure whether there is vibration noise in the workrooms. | Hearing | NA |
| | | Ensure the contactor is good enough. | Visual examination | NA |
| Control circuit | PCB and plugs | Ensure there is no loose screws and contactors. | Fasten up | NA |
| | | Ensure there is no smelling and color-changing. | Smelling and visual examination | NA |
| | | Ensure there are no crackles, damage distortion and rust. | Visual examination | NA |

| Checking part | | Checking item | Checking method | Criterion |
|----------------|------------------|--|--|-----------------|
| | | Ensure there is no weeping and distortion to the capacitors. | Visual examination or estimate the usage time according to the maintenance information | NA |
| Cooling system | Cooling fan | Estimate whether there is abnormal noise and vibration. | Hearing and Visual examination or rotate with hand | Stable rotation |
| | | Estimate there is no losses screw. | Tighten up | NA |
| | | Ensure there is no color-changing caused by overheating. | Visual examination or estimate the usage time according to the maintenance information | NA |
| | Ventilating duct | Ensure whether there is stuff or foreign objection in the cooling fan, air vent. | Visual examination | NA |

6.1.2 Cooling fan

The VFD's cooling fan has a minimum life span of 25,000 operating hours. The actual life span depends on the VFD usage and ambient temperature.

The operating hours can be found through P07.14 (accumulative hours of the VFD).

Fan failure can be predicted by the increasing noise from the fan bearings. If the VFD is operated in a critical part of a process, fan replacement is recommended once these symptoms appear. Replacement fans are available from IKON.



✧ Read and follow the instructions in chapter *Safety Precautions*. Ignoring the instructions would cause physical injury or death, or damage to the equipment.

1. Stop the VFD and disconnect it from the AC power source and wait for at least the time designated on the VFD.
2. Lever the fan holder off the drive frame with a screwdriver and lift the hinged fan holder slightly upward from its front edge.
3. Disconnect the fan cable.
4. Remove the fan holder from the hinges.
5. Install the new fan holder including the fan in reverse order. Keep the wind direction of the fan consistent with that of the VFD, as shown below:
6. Restore power.

6.1.3 Capacitors

Reforming the capacitors

The DC bus capacitors must be reformed according to the operation instruction if the VFD has been stored for a long time. The storing time is counted from the producing date other than the delivery data which has been marked in the serial number of the VFD.


| Time | Operational principle |
|--------------------------------|---|
| Storing time less than 1 year | Operation without charging |
| Storing time 1-2 years | Connect with the power for 1 hour before first ON command |
| Storing time 2-3 years | Use power surge to charge for the VFD <ul style="list-style-type: none"> • Add 25% rated voltage for 30 minutes • Add 50% rated voltage for 30 minutes • Add 75% rated voltage for 30 minutes • Add 100% rated voltage for 30 minutes |
| Storing time more than 3 years | Use power surge to charge for the VFD <ul style="list-style-type: none"> • Add 25% rated voltage for 2 hours • Add 50% rated voltage for 2 hours • Add 75% rated voltage for 2 hours • Add 100% rated voltage for 2 hours |

The method of using power surge to charge for the VFD:

The right selection of Power surge depends on the supply power of the VFD. Single phase 220V AC/2A power surge applied to the VFD with single/three-phase 220V AC as its input voltage. All DC bus capacitors charge at the same time because there is one rectifier.


High-voltage VFD needs enough voltage (for example, 380V) during charging. The small capacitor power (2A is enough) can be used because the capacitor nearly does not need current when charging.

Change electrolytic capacitors

| | |
|--|---|
|  | <p>✧ Read and follow the instructions in chapter <i>Safety Precautions</i>. Ignoring the instructions may cause physical injury or death, or damage to the equipment.</p> |
|--|---|

Change electrolytic capacitors if the working hours of electrolytic capacitors in the VFD are above 35000. Please contact with the local IKON offices or diall our national service hotline (400-700-9997) for detailed operation.

6.1.4 Power cable

| | |
|--|---|
|  | <p>✧ Read and follow the instructions in chapter <i>Safety Precautions</i>. Ignoring the instructions may cause physical injury or death, or damage to the equipment.</p> |
|--|---|

1. Stop the drive and disconnect it from the power line. Wait for at least the time designated on the VFD.
2. Check the tightness of the power cable connections.
3. Restore power.

6.2 Fault rectification



- ✧ Only qualified electricians are allowed to maintain the VFD. Read the safety instructions in chapter Safety precautions before working on the VFD.

6.2.1 Alarm and fault indications

Fault is indicated by LEDs. See **Operation Procedure**. When **TRIP** light is on, an alarm or fault message on the panel display indicates abnormal VFD state. P07.27 ~ P07.32 record the latest 6 fault type and P07.33 ~ P07.56 record the operation data of the latest 3 fault type. Using the information reference in this chapter, most alarm and fault cause can be identified and corrected. If not, contact with the IKON office.

6.2.2 Fault reset

The VFD can be reset by pressing the keypad key **STOP/RST**, through digital input, or by switching the power light. When the fault has been removed, the motor can be restarted.

6.2.3 Fault instruction and solution

Do as the following after the VFD fault:

1. Check to ensure there is nothing wrong with the keypad. If not, please contact with the local IKON office.
2. If there is nothing wrong, please check P07 and ensure the corresponding recorded fault parameters to confirm the real state when the current fault occurs by all parameters.
3. See the following table for detailed solution and check the corresponding abnormal state.
4. Eliminate the fault and ask for relative help.
5. Check to eliminate the fault and carry out fault reset to run the VFD.

| Fault code | Fault type | Possible cause | What to do |
|------------|--|--|--|
| OC1 | Over-current when acceleration | 1. The acceleration or deceleration is too fast. | 1. Increase the ACC time |
| OC2 | Over-current when deceleration | 2. The voltage of the grid is too low. | 2. Check the input power |
| OC3 | Over-current when constant speed running | 3. The power of the VFD is too low. | 3. Select the VFD with a larger power |
| | | 4. The load transients or is abnormal. | 4. Check if the load is short circuited (the grounding short circuited or the wire short circuited) or the rotation is not smooth. |
| | | 5. The grounding is short circuited or the output is phase loss. | 5. Check the output configuration. |
| OV1 | Over-voltage when acceleration | 6. There is strong external interference. | 6. Check if there is strong interference. |
| OV2 | Over-voltage when deceleration | 1. The input voltage is abnormal. | 1. Check the input power |
| | | 2. There is large energy feedback. | 2. Check if the DEC time of the load is too short or the VFD starts during the rotation of the |

| | | | |
|-----|--|---|--|
| OV3 | Over-voltage when constant speed running | | motor or it needs to add the dynamic braking components. |
| UV | DC bus Under-voltage | The voltage of the power supply is too low. | Check the input power of the supply line |
| OL1 | Motor overload | <ol style="list-style-type: none"> 1. The voltage of the power supply is too low. 2. The motor setting rated current is incorrect. 3. The motor stall or load transients is too strong. | <ol style="list-style-type: none"> 1. Check the power of the supply line 2. Reset the rated current of the motor 3. Check the load and adjust the torque lift |
| OL2 | VFD overload | <ol style="list-style-type: none"> 1. The acceleration is too fast 2. Reset the rotating motor 3. The voltage of the power supply is too low. 4. The load is too heavy. 5. The motor power is too small. | <ol style="list-style-type: none"> 1. Increase the ACC time 2. Avoid the restarting after stopping. 3. Check the power of the supply line 4. Select an VFD with bigger power. 5. Select a proper motor. |
| OL3 | Electrical overload | The VFD will report overload pre-alarm according to the set value. | Check the load and the overload pre-alarm point. |
| OH1 | Rectifier overheated | <ol style="list-style-type: none"> 1. Air duct jam or fan damage 2. Ambient temperature is too high. 3. The time of overload running is too long. | <ol style="list-style-type: none"> 1. Refer to the overcurrent solution 2. Redistribute dredge the wind channel or change the fan 3. Low the ambient temperature 4. Check and reconnect 5. Change the power 6. Change the power unit 7. Change the main control panel |
| OH2 | Inverter module overheated | | |
| EF | External fault | SI external fault input terminals action | Check the external device input |
| CE | Communication error | <ol style="list-style-type: none"> 1. The baud rate setting is incorrect. 2. Fault occurs to the communication wiring. 3. The communication address is wrong. 4. There is strong interference to the communication. | <ol style="list-style-type: none"> 1. Set proper baud rate 2. Check the communication connection distribution 3. Set proper communication address. 4. Chang or replace the connection distribution or improve the anti-interference capability. |

| | | | |
|------|-------------------------------|---|--|
| EEP | EEPROM fault | 1. Error of controlling the write and read of the parameters 2. Damage to EEPROM | 1. Press STOP/RST to reset 2. Change the main control panel |
| PIDE | PID feedback fault | 1. PID feedback offline 2. PID feedback source disappear | 1. Check the PID feedback signal 2. Check the PID feedback source |
| END | Time reach of factory setting | The actual running time of the VFD is above the internal setting running time. | Ask for the supplier and adjust the setting running time. |
| LL | Electronic underload fault | The VFD will report the underload pre-alarm according to the set value. | Check the load and the underload pre-alarm point. |

Chapter 7 Communication protocol

7.1 Modbus protocol introduction

Modbus protocol is a software protocol and common language which is applied in the electrical controller. With this protocol, the controller can communicate with other devices via network (the channel of signal transmission or the physical layer, such as RS485). And with this industrial standard, the controlling devices of different manufacturers can be connected to an industrial network for the convenient of being monitored.

There are two transmission modes for Modbus protocol: ASCII mode and RTU (Remote Terminal Units) mode. On one Modbus network, all devices should select same transmission mode and their basic parameters, such as baud rate, digital bit, check bit, and stopping bit should have no difference.

Modbus network is a controlling network with single-master and multiple slaves, which means that there is only one device performs as the master and the others are the slaves on one Modbus network. The master means the device which has active talking right to sent message to Modbus network for the controlling and inquiring to other devices. The slave means the passive device which sends data message to the Modbus network only after receiving the controlling or inquiring message (command) from the master (response). After the master sends message, there is a period of time left for the controlled or inquired slaves to response, which ensure there is only one slave sends message to the master at a time for the avoidance of singles impact.

Generally, the user can set PC, PLC, IPC and HMI as the masters to realize central control. Setting certain device as the master is a promise other than setting by a bottom or a switch or the device has a special message format. For example, when the upper monitor is running, if the operator clicks sending command bottom, the upper monitor can send command message actively even it can not receive the message from other devices. In this case, the upper monitor is the master. And if the designer makes the VFD send the data only after receiving the command, then the VFD is the slave.

The master can communicate with any single slave or with all slaves. For the single-visiting command, the slave should feedback a response message; for the broadcasting message from the master, the slave does not need to feedback the response message.

7.2 Application mode for the VFD

The Modbus protocol of the VFD is RTU mode and the physical layer is 2-wire RS485.

7.2.1 Two-wire RS485

The interface of 2-wire RS485 works on semiduplex and its data signal applies differential transmission which is called balance transmission, too. It uses twisted pairs, one of which is defined as A (+) and the other is defined as B (-). Generally, if the positive electrical level between sending drive A and B is among +2~+6V, it is logic "1", if the electrical level is among -2V~-6V; it is logic "0".

485+ on the terminal board corresponds to A and 485- to B.

Communication baud rate means the binary bit number in one second. The unit is bit/s (bps). The higher the baud rate is, the quicker the transmission speed is and the weaker the anti-interference is. If the twisted pairs of 0.56mm (24AWG) is applied as the communication cables, the Max. Transmission distance is as below:

| Baud rate | Max. transmission distance | Baud rate | Max. transmission distance | Baud rate | Max. transmission distance | Baud rate | Max. transmission distance |
|-----------|----------------------------|-----------|----------------------------|-----------|----------------------------|-----------|----------------------------|
| 2400BPS | 1800m | 4800BPS | 1200m | 9600BPS | 800m | 19200BPS | 600m |

It is recommended to use shield cables and make the shield layer as the grounding wires during RS485 remote communication.

In the cases with less devices and shorter distance, it is recommended to use 120Ω terminal resistor as the performance will be weakened if the distance increase even though the network can perform well without load resistor.

7.2.1.1 Single application

Figure 7-1 is the site Modbus connection figure of single VFD and PC. Generally, the computer does not have RS485 interface, the RS232 or USB interface of the computer should be converted into RS485 by converter. Connect the A terminal of RS485 to the 485+ terminal of the VFD and B to the 485- terminal. It is recommended to use the shield twisted pairs. When applying RS232-RS485 converter, if the RS232 interface of the computer is connected to the RS232 interface of the converter, the wire length should be as short as possible within the length of 15m. It is recommended to connect the RS232-RS485 converter to the computer directly. If using USB-RS485 converter, the wire should be as short as possible, too.

Select a right interface to the upper monitor of the computer (select the interface of RS232-RS485 converter, such as COM1) after the wiring and set the basic parameters such as communication baud rate and digital check bit to the same as the VFD.

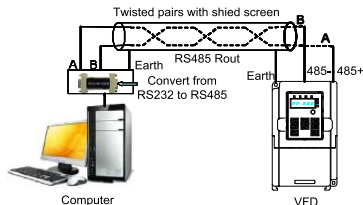


Figure 7-1 RS485 physical connection in single application

7.2.1.2 Multi-application In the real multi-application, the chrysanthemum connection and star connection are commonly used.

Chrysanthemum chain connection is required in the RS485 industrial fieldbus standards. The two ends are connected to terminal resistors of 120Ω which is shown in Figure 7-2.

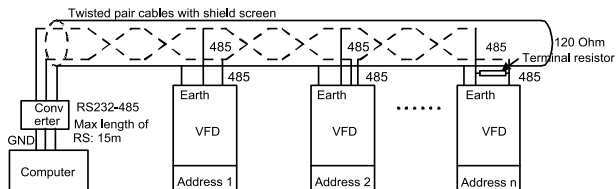


Figure 7-2 Chrysanthemum connection applications

Figure 7-3 is the star connection. Terminal resistor should be connected to the two devices which have the longest distance. (1# and 15#device)

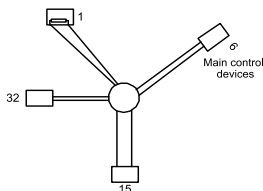


Figure 7-3 star connection

It is recommended to use shield cables in multiple connection. The basic parameter of the devices, such as baud rate and digital check bit in RS485 should be the same and there should be no repeated address.

7.2.2 RTU mode

7.2.2.1 RTU communication frame format

If the controller is set to communicate by RTU mode in Modbus network every 8bit byte in the message includes two 4Bit hex characters. Compared with ACSII mode, this mode can send more data at the same baud rate.

Code system

- . 1 start bit
- . 7 or 8 digital bit, the minimum valid bit can be sent firstly. Every 8 bit frame includes two hex characters (0...9, A...F)
- . 1 even/odd check bit . If there is no checkout, the even/odd check bit is inexistent.
- . 1 end bit (with checkout), 2 Bit(no checkout)

Error detection field

- . CRC

The data format is illustrated as below:

11-bit character frame (BIT1 - BIT8 are the digital bits)


| Start bit | BIT1 | BIT2 | BIT3 | BIT4 | BIT5 | BIT6 | BIT7 | BIT8 | Check bit | End bit |
|-----------|------|------|------|------|------|------|------|------|-----------|---------|
|-----------|------|------|------|------|------|------|------|------|-----------|---------|

10-bit character frame (BIT1 - BIT7 are the digital bits)

| | | | | | | | | | |
|-----------|------|------|------|------|------|------|------|-----------|---------|
| Start bit | BIT1 | BIT2 | BIT3 | BIT4 | BIT5 | BIT6 | BIT7 | Check bit | End bit |
|-----------|------|------|------|------|------|------|------|-----------|---------|

In a character frame, only the data bits carry information. The start bit, check bit, and end bit are used to facilitate the transmission of the data bits to the destination device. In practical applications, you must set the data bits, parity check bits, and end bits consistently.

In RTU mode, the transmission of a new frame always starts from an idle time (the transmission time of 3.5 bytes). On a network where the transmission rate is calculated based on the baud rate, the transmission time of 3.5 bytes can be easily obtained. After the idle time ends, the data domains are transmitted in the following sequence: slave address, operation command code, data, and CRC check character. Each byte transmitted in each domain includes 2 hexadecimal characters (0–9, A–F). The network devices always monitor the communication bus. After receiving the first domain (address information), each network device identifies the byte. After the last byte is transmitted, a similar transmission interval (the transmission time of 3.5 bytes) is used to indicate that the transmission of the frame ends. Then, the transmission of a new frame starts.

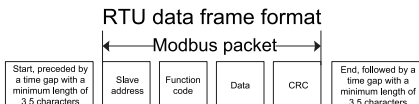

The information of a frame must be transmitted in a continuous data flow. If there is an interval greater than the transmission time of 1.5 bytes before the transmission of the entire frame is complete, the receiving device deletes the incomplete information, and mistakes the subsequent byte for the address domain of a new frame. Similarly, if the transmission interval between two frames is shorter than the transmission time of 3.5 bytes, the receiving device mistakes it for the data of the last frame. The CRC check value is incorrect due to the disorder of the frames, and thus a communication fault occurs.

The standard structure of RTU frame:

| | |
|------------------|--|
| START | T1-T2-T3-T4(transmission time of 3.5 bytes) |
| ADDR | Communication address: 0 - 247(decimal system)(0 is the broadcast address) |
| CMD | 03H:read slave parameters 06H:write slave parameters |
| DATA (N-1) | The data of 2*N bytes are the main content of the communication as well as the core of data exchanging |
| DATA (0) | |
| CRC CHK low bit | Detection value:CRC (16BIT. |
| CRC CHK high bit | |
| END | T1-T2-T3-T4(transmission time of 3.5 bytes) |

7.2.2.2 RTU communication frame error checkout

Various factors (such as electromagnetic interference) may cause error in the data transmission. For example, if the sending message is a logic "1", A-B potential difference on RS485 should be 6V, but in reality, it may be -6V because of electromagnetic interference, and then the other devices take the sent message as logic "0". If there is no error checkout, the receiving devices will not find the message is wrong and they may give incorrect response which cause serious result. So the checkout is essential to the message.

The theme of checkout is that: the sender calculate the sending data according to a fixed formula, and then send the result with the message. When the receiver gets this message, they will calculate another result according to the same method and compare it with the sending one. If two results are the same, the message is correct. If not, the message is incorrect.

The error checkout of the frame can be divided into two parts: the bit checkout of the byte and the whole data checkout of the frame (CRC check).

Bit checkout of the byte

The user can select different bit checkouts or non-checkout, which impacts the check bit setting of each byte.

The definition of even checkout: add an even check bit before the data transmission to illustrate the number of "1" in the data transmission is odd number or even number. When it is even, the check byte is "0", otherwise, the check byte is "1". This method is used to stabilize the parity of the data.

The definition of odd checkout: add an odd check bit before the data transmission to illustrate the number of "1" in the data transmission is odd number or even number. When it is odd, the check byte is "0", otherwise, the check byte is "1". This method is used to stabilize the parity of the data.

For example, when transmitting "11001110", there are five "1" in the data. If the even checkout is applied, the even check bit is "1"; if the odd checkout is applied; the odd check bit is "0". The even and odd check bit is calculated on the check bit position of the frame. And the receiving devices also carry out even and odd checkout. If the parity of the receiving data is different from the setting value, there is an error in the communication.

CRC check

The checkout uses RTU frame format. The frame includes the frame error detection field which is based on the CRC calculation method. The CRC field is two bytes, including 16 figure binary values. It is added into the frame after calculated by transmitting device. The receiving device recalculates the CRC of the received frame and compares them with the value in the received CRC field. If the two CRC values are different, there is an error in the communication.

During CRC, 0xFFFF will be stored. And then, deal with the continuous 6-above bytes in the frame and the value in the register. Only the 8Bit data in every character is valid to CRC, while the start bit, the end and the odd and even check bit is invalid.

The calculation of CRC applies the international standard CRC checkout principles. When the user is editing CRC calculation, he can refer to the relative standard CRC calculation to write the required CRC calculation program.

Here provided a simple function of CRC calculation for the reference (programmed with C language):

```
unsigned int crc_cal_value(unsigned char *data_value, unsigned char data_length)
{
    int i;
```

```

unsigned int crc_value=0xffff;
while(data_length--)
{
    crc_value^=*data_value++;
    for(i=0;i<8;i++)
    {
        if(crc_value&0x0001)crc_value=(crc_value>>1)^0xa001;
        else crc_value=crc_value>>1;
    }
}

return(crc_value);
}

```

In ladder logic, CKSM calculated the CRC value according to the frame with the table inquiry. The method is advanced with easy program and quick calculation speed. But the ROM space the program occupied is huge. So use it with caution according to the program required space.

7.3 RTU command code and communication data description

7.3.1 Command code: 03H

03H correspond to binary 0000 0011 ,read N words Word (the Max. continuous reading is 16 words)

Command code 03H means that if the master read data form the VFD, the reading number depends on the "data number" in the command code. The Max. Continuous reading number is 16 and the parameter address should be continuous. The byte length of every data is 2 (one word). The following command format is illustrated by hex (a number with "H" means hex) and one hex occupies one byte.

The command code is used to read the working stage of the VFD.

For example, read continuous 2 data content from 0004H from the VFD with the address of 01H (read the content of data address of 0004H and 0005H), the frame structure is as below:

RTU master command message (from the master to the VFD)

| | |
|---------------------------|--|
| START | T1-T2-T3-T4 (transmission time of 3.5 bytes) |
| ADDR | 01H |
| CMD | 03H |
| High bit of the start bit | 00H |
| Low bit of the start bit | 04H |
| High bit of data number | 00H |
| Low bit of data number | 02H |
| CRC low bit | 85H |
| CRC high bit | CAH |
| END | T1-T2-T3-T4 (transmission time of 3.5 bytes) |

T1-T2-T3-T4 between START and END is to provide at least the time of 3.5 bytes as the leisure time and distinguish two messages for the avoidance of taking two messages as one message.

ADDR = 01H means the command message is sent to the VFD with the address of 01H and ADDR occupies one byte

CMD=03H means the command message is sent to read data form the VFD and CMD occupies one byte

"Start address" means reading data form the address and it occupies 2 bytes with the fact that the high bit

is in the front and the low bit is in the behind.

“Data number” means the reading data number with the unit of word. If the “start address” is 0004H and the “data number” is 0002H, the data of 0004H and 0005H will be read.

CRC occupies 2 bytes with the fact that the high bit is in the front and the low bit is in the behind.

RTU slave response message (from the VFD to the master)

| | |
|--------------------------------|--|
| START | T1-T2-T3-T4 (transmission time of 3.5 bytes) |
| ADDR | 01H |
| CMD | 03H |
| Byte number | 04H |
| Data high bit of address 0004H | 13H |
| Data low bit of address 0004H | 88H |
| Data high bit of address 0005H | 00H |
| Data low bit of address 0005H | 00H |
| CRC CHK low bit | 7EH |
| CRC CHK high bit | 9DH |
| END | T1-T2-T3-T4 (transmission time of 3.5 bytes) |

The meaning of the response is that:

ADDR = 01H means the command message is sent to the VFD with the address of 01H and ADDR occupies one byte

CMD=03H means the message is received from the VFD to the master for the response of reading command and CMD occupies one byte

“Byte number” means all byte number from the byte(excluding the byte) to CRC byte(excluding the byte). 04 means there are 4 byte of data from the “byte number” to “CRC CHK low bit”, which are “digital address 0004H high bit”, “digital address 0004H low bit”, “digital address 0005H high bit” and “digital address 0005H low bit”.

There are 2 bytes stored in one data with the fact that the high bit is in the front and the low bit is in the behind of the message, the data of data address 0004H is 1388H, and the data of data address 0005H is 0000H.

CRC occupies 2 bytes with the fact that the high bit is in the front and the low bit is in the behind.

7.3.2 Command code: 06H

06H(correspond to binary 0000 0110), write one word(Word)

The command means that the master write data to the VFD and one command can write one data other than multiple dates. The effect is to change the working mode of the VFD.

For example, write 5000 (1388H) to 0004H from the VFD with the address of 02H, the frame structure is as below:

RTU master command message (from the master to the VFD)

| | |
|----------------------------------|--|
| START | T1-T2-T3-T4 (transmission time of 3.5 bytes) |
| ADDR | 02H |
| CMD | 06H |
| High bit of writing data address | 00H |

| | |
|---------------------------------|--|
| Low bit of writing data address | 04H |
| data content | 13H |
| data content | 88H |
| CRC CHK low bit | C5H |
| CRC CHK high bit | 6EH |
| END | T1-T2-T3-T4 (transmission time of 3.5 bytes) |

RTU slave response message (from the VFD to the master)

| | |
|----------------------------------|--|
| START | T1-T2-T3-T4 (transmission time of 3.5 bytes) |
| ADDR | 02H |
| CMD | 06H |
| High bit of writing data address | 00H |
| Low bit of writing data address | 04H |
| High bit of data content | 13H |
| Low bit of data content | 88H |
| CRC CHK low bit | C5H |
| CRC CHK high bit | 6EH |
| END | T1-T2-T3-T4 (transmission time of 3.5 bytes) |

Note: section 7.31 and 7.32 mainly describe the command format, and the detailed application will be mentioned in 10.8 with examples.

7.3.3 Command code 08H for diagnosis

Meaning of sub-function codes

| Sub-function Code | Description |
|-------------------|------------------------------------|
| 0000 | Return to inquire information data |

For example: The inquiry information string is same as the response information string when the loop detection to address 01H of driver is carried out.

The RTU request command is:

| | |
|--------------------------------|--|
| START | T1-T2-T3-T4 (transmission time of 3.5 bytes) |
| ADDR | 01H |
| CMD | 08H |
| High byte of sub-function code | 00H |
| Low byte of sub-function code | 00H |
| High byte of data content | 12H |
| Low byte of data content | ABH |
| Low byte of CRC | ADH |
| High byte of CRC | 14H |
| END | T1-T2-T3-T4 (transmission time of 3.5 bytes) |

The RTU response command is:

| | |
|--------------------------------|--|
| START | T1-T2-T3-T4 (transmission time of 3.5 bytes) |
| ADDR | 01H |
| CMD | 08H |
| High byte of sub-function code | 00H |
| Low byte of sub-function code | 00H |
| High byte of data content | 12H |
| Low byte of data content | ABH |
| Low byte of CRC | ADH |
| High byte of CRC | 14H |
| END | T1-T2-T3-T4 (transmission time of 3.5 bytes) |

7.3.4 The definition of data address

The address definition of the communication data in this part is to control the running of the VFD and get the state information and relative function parameters of the VFD.

7.3.4.1 The rules of parameter address of the function codes

The parameter address occupies 2 bytes with the fact that the high bit is in the front and the low bit is in the behind. The range of high and low byte are: high byte—00 ~ ffH; low byte—00 ~ ffH. The high byte is the group number before the radix point of the function code and the low byte is the number after the radix point. But both the high byte and the low byte should be changed into hex. For example P05.05, the group number before the radix point of the function code is 05, then the high bit of the parameter is 05, the number after the radix point 05, then the low bit of the parameter is 05, then the function code address is 0505H and the parameter address of P10.01 is 0A01H.

Note: P29 group is the factory parameter which can not be read or changed. Some parameters can not be changed when the VFD is in the running state and some parameters can not be changed in any state. Setting range, unit and relative instructions should be paid attention to when modifying the function code parameters.

Besides, EEPROM is stocked frequently, which may shorten the usage time of EEPROM. For users, some functions are not necessary to be stocked on the communication mode. The needs can be met on by changing the value in RAM. Changing the high bit of the function code from 0 to 1 can also realize the function. For example, the function code P00.07 is not stocked into EEPROM. Only by changing the value in RAM can set the address to 8007H. This address can only be used in writing RAM other than reading. If it is used to read, it is an invalid address.

7.3.4.2 The address instruction of other function in Modbus

The master can operate on the parameters of the VFD as well as control the VFD, such as running or stopping and monitoring the working state of the VFD.

Below is the parameter list of other functions

| Function instruction | Address definition | Data meaning instruction | R/W characteristics |
|--|--------------------|---|---------------------|
| Communication control command | 2000H | 0001H:forward running | R/W |
| | | 0002H:reverse running | |
| | | 0003H:forward jogging | |
| | | 0004H:reverse jogging | |
| | | 0005H:stop | |
| | | 0006H:coast to stop (emergency stop) | |
| | | 0007H:fault reset | |
| | | 0008H:jogging stop | |
| The address of the communication setting value | 2001H | Communication setting frequency(0—Fmax(unit: 0.01Hz)) | R/W |
| | 2002H | PID reference, range(0 - 1000, 1000 corresponds to 100.0%) | |
| | 2003H | PID feedback, range(0 - 1000, 1000 corresponds to 100.0%) | R/W |
| | 200AH | Virtual input terminal command , range: 0x000—0x1FF | R/W |
| | 200BH | Virtual input terminal command , range: 0x00—0x0F | R/W |
| | 200DH | AO output setting 1(-1000—1000, 1000 corresponds to 100.0%) | R/W |
| SW 1 of the VFD | 2100H | 0001H:forward running | R |
| | | 0002H:forward running | |
| | | 0003H:stop | |
| | | 0004H:fault | |
| | | 0005H: POFF state | |
| SW 1 of the VFD | 2101H | Bit0: =0:bus voltage is not established =1:bus voltage is established Bit1—2:=00:motor 1 Bit3: =0:asynchronous motor =1:synchronous motor Bit4:=0:pre-alarm without overload =1:overload pre-alarm Bit5 - Bit6:=00:keypad control =01:terminal control =10:communication control | R |
| Fault code of the VFD | 2102H | See the fault type instruction | R |
| Identifying code of the VFD | 2103H | Goodrive10-----0x010d | R |
| Setting frequency | 3001H | Compatible with GD series, CHF100A and CHV100 | R |
| Bus voltage | 3002H | | R |

| Function instruction | Address definition | Data meaning instruction | R/W characteristics |
|-------------------------|--------------------|--------------------------|---------------------|
| Output voltage | 3003H | | R |
| Output current | 3004H | | R |
| Operation speed | 3005H | | R |
| Output power | 3006H | | R |
| Output torque | 3007H | | R |
| PID setting | 3008H | | R |
| PID feedback | 3009H | | R |
| Input IO state | 300AH | | R |
| Output IO state | 300BH | | R |
| AI 1 | 300CH | | R |
| AI 2 | 300DH | | R |
| Reserved | 300EH | | R |
| Reserved | 300FH | | R |
| Reserved | 3010H | | R |
| Reserved | 3011H | | R |
| Reserved | 3012H | | R |
| Reserved | 3013H | | R |
| External counting value | 3014H | | R |
| Torque setting | 3015H | | R |
| VFD code | 3016H | | R |
| Fault code | 5000H | | R |

R/W characteristics means the function is with read and write characteristics. For example, "communication control command" is writing characteristics and control the VFD with writing command (06H). R characteristic can only read other than write and W characteristic can only write other than read.

Note: When you operate on the VFD with the table above, it is necessary to enable some parameters. For example, the operation of running and stopping, it is necessary to set P00.01 to communication running command channel and set P00.02 to MODBUS communication channel. And when operate on "PID reference", it is necessary to set P09.00 to "MODBUS communication setting".

The encoding rules for device codes (corresponds to identifying code 2103H of the VFD)

| Code high 8bit | Meaning | Code low 8 position | Meaning |
|----------------|---------|---------------------|---------------------|
| 01 | GD | 0x08 | GD35 vector VFDs |
| | | 0x09 | GD35-H1 vector VFDs |
| | | 0x0a | GD300 vector VFDs |

| Code high 8bit | Meaning | Code low 8 position | Meaning |
|----------------|---------|---------------------|--------------------------|
| | | 0x0b | GD100 simple vector VFDs |
| | | 0x0c | GD200 general VFDs |
| | | 0x0d | GD10 mini VFDs |

Note: the code is consisted of 16 bit which is high 8 bits and low 8 bits. High 8 bits mean the motor type series and low 8 bits mean the derived motor types of the series. For example, 0110H means Goodrive10 vector VFDs.

7.3.5 Fieldbus ratio values

The communication data is expressed by hex in actual application and there is no radix point in hex. For example, 50.12Hz can not be expressed by hex so 50.12 can be magnified by 100 times into 5012, so hex 1394H can be used to express 50.12.

A non-integer can be timed by a multiple to get an integer and the integer can be called fieldbus ratio values. The fieldbus ratio values are referred to the radix point of the setting range or default value in the function parameter list. If there are figures behind the radix point ($n=1$), then the fieldbus ratio value m is 10^n . Take the table as the example:

| Function code | Name | Details | Setting range | Default value | Modify |
|---------------|-------------------------------|--|---------------|---------------|--------|
| P01.20 | Wake-up from sleep delay time | 0.0 – 3600.0s (valid when P01.19=2) | 0.0 – 3600.0 | 0.0s | |
| P01.21 | Restart after power off | 0: Disable 1: Enable | 0 – 1 | 0 | |

If there is one figure behind the radix point in the setting range or the default value, then the fieldbus ratio value is 10. if the data received by the upper monitor is 50, then the "hibernation restore delay time" is 5.0 (5.0=50÷10).

If Modbus communication is used to control the hibernation restore delay time as 5.0s. Firstly, 5.0 can be magnified by 10 times to integer 50 (32H) and then this data can be sent.

01 06 01 14 00 32 49 E7
VFD Write Parameters Data number CRC check
address command address

After the VFD receives the command, it will change 50 into 5 according to the fieldbus ratio value and then set the hibernation restore delay time as 5s.

Another example, after the upper monitor sends the command of reading the parameter of hibernation restore delay time ,if the response message of the VFD is as following:

01 03 02 00 32 39 91
VFD Read 2-byte Parameter CRC
address command data data

Because the parameter data is 0032H (50) and 50 divided by 10 is 5, then the hibernation restore delay time is 5s.

7.3.6 Fault message response

There may be fault in the communication control. For example, some parameter can only be read. If a writing message is sent, the VFD will return a fault response message.

The fault message is from the VFD to the master, its code and meaning is as below:

| Code | Name | Meaning |
|------|---|--|
| 01H | Illegal command | The command from master can not be executed. The reason maybe: 1. This command is only for new version and this version can not realize. 2. Slave is in fault state and can not execute it. |
| 02H | Illegal data address. | Some of the operation addresses are invalid or not allowed to access. Especially the combination of the register and the transmitting bytes are invalid. |
| 03H | Illegal value | When there are invalid data in the message framed received by slave. Note: This error code does not indicate the data value to write exceed the range, but indicate the message frame is an illegal frame. |
| 04H | Operation failed | The parameter setting in parameter writing is invalid. For example, the function input terminal can not be set repeatedly. |
| 05H | Password error | The password written to the password check address is not same as the password set by P7.00. |
| 06H | Data frame error | In the frame message sent by the upper monitor, the length of the digital frame is incorrect or the counting of CRC check bit in RTU is different from the lower monitor. |
| 07H | Written not allowed. | It only happen in write command, the reason maybe: 1. The written data exceeds the parameter range. 2. The parameter should not be modified now. 3. The terminal has already been used. |
| 08H | The parameter can not be changed during running | The modified parameter in the writing of the upper monitor can not be modified during running. |
| 09H | Password protection | When the upper monitor is writing or reading and the user password is set without password unlocking, it will report that the system is locked. |

The slave uses functional code fields and fault addresses to indicate it is a normal response or some error occurs (named as objection response). For normal responses, the slave shows corresponding function codes, digital address or sub-function codes as the response. For objection responses, the slave returns a code which equals the normal code, but the first byte is logic 1.

For example: when the master sends a message to the slave, requiring it to read a group of address data of the VFD function codes, there will be following function codes:

0 0 0 0 0 1 1 (Hex 03H)

For normal responses, the slave responds the same codes, while for objection responses, it will return:

1 0 0 0 0 1 1 (Hex 83H)

Besides the function codes modification for the objection fault, the slave will respond a byte of abnormal code which defines the error reason.

When the master receives the response for the objection, in a typical processing, it will send the message again or modify the corresponding order.

For example, set the "running command channel" of the VFD (P00.01, parameter address is 0001H) with the address of 01H to 03, the command is as following:

| | | | | |
|------------------|------------------|----------------------|---------------------|---------------------|
| <u>01</u> | <u>06</u> | <u>00 01</u> | <u>00 03</u> | <u>98 0B</u> |
| VFD address | Write command | Parameter address | Parameter data | CRC |

But the setting range of "running command channel" is 0 - 2, if it is set to 3, because the number is beyond the range, the VFD will return fault response message as below:

| | | | |
|------------------|----------------------------|------------------|---------------------|
| <u>01</u> | <u>86</u> | <u>04</u> | <u>43 A3</u> |
| VFD address | Exception response code | Error code | CRC |

Abnormal response code 86H means the abnormal response to writing command 06H; the fault code is 04H. In the table above, its name is operation failed and its meaning is that the parameter setting in parameter writing is invalid. For example, the function input terminal can not be set repeatedly.

7.3.7 Example of writing and reading

Refer to 10.4.1 and 10.4.2 for the command format.

7.3.7.1 Example of reading command 03H

Read the state word 1 of the VFD with the address of 01H (refer to table 1). From the table 1, the parameter address of the state word 1 of the VFD is 2100H.

The command sent to the VFD:

| | | | | |
|------------------|------------------|----------------------|---------------------|---------------------|
| <u>01</u> | <u>03</u> | <u>21 00</u> | <u>00 01</u> | <u>8E 36</u> |
| VFD address | Read command | Parameter address | Data quantity | CRC |

If the response message is as below:

| | | | | |
|------------------|------------------|--------------------|---------------------|---------------------|
| <u>01</u> | <u>03</u> | <u>02</u> | <u>00 03</u> | <u>F8 45</u> |
| VFD address | Read command | Number of bytes | Data content | CRC |

The data content is 0003H. From the table 1, the VFD stops.

Watch "the current fault type" to "the previous 5 times fault type" of the VFD through commands, the corresponding function code is P07.27 - P07.32 and corresponding parameter address is 071BH - 0720H(there are 6 from 071BH).

The command sent to the VFD:

| | | | | |
|------------------|------------------|---------------------|-----------------------|---------------------|
| <u>03</u> | <u>03</u> | <u>07 1B</u> | <u>00 06</u> | <u>B5 59</u> |
| VFD address | Read command | Start address | 6 parameters in total | CRC |

If the response message is as below:

03 03 0C 00 23 00 23 00 23 00 23 00 23 00 23 00 23 5F D2

VFD address Read command Number of bytes Type of current fault Type of last fault Type of last but one fault Type of last but two fault Type of last but three fault Type of last but four fault CRC

See from the returned data, all fault types are 0023H (decimal 35) with the meaning of maladjustment (STo).

7.3.7.2 Example of writing command 06H

Make the VFD with the address of 03H to run forward. See table 1, the address of "communication control command" is 2000H and forward running is 0001. See the table below.

| Function | Address | Data description | R/W |
|-------------------------------------|---------|---------------------------------------|-----|
| Communication-based control command | 2000H | 0001H: Forward running | R/W |
| | | 0002H: Reverse running | |
| | | 0003H: Forward jogging | |
| | | 0004H: Reverse jogging | |
| | | 0005H: Stop | |
| | | 0006H: Coast to stop (emergency stop) | |
| | | 0007H: Fault reset | |
| | | 0008H: Jogging to stop | |

The command sent by the master:

03

VFD address

06

Write command

20 00

Parameter address

00 01

Forward running

42 28

CRC

If the operation is successful, the response may be as below (the same with the command sent by the master):

03

VFD address

06

Write command

20 00

Parameter address

00 01

Forward running

42 28

CRC

Set the Max. Output frequency of the VFD with the address of 03H as 100Hz.

| Function code | Name | Detailed parameter description | Default value | Modify |
|---------------|-----------------------|---|---------------|--------|
| P00.03 | Max. output frequency | This parameter is used to set the maximum output frequency of the VFD. Users should pay attention to this parameter because it is the foundation of the frequency setting and the speed of acceleration and deceleration. Setting range: P00.04–400.00Hz | 50.00Hz | |

See the figures behind the radix point, the fieldbus ratio value of the Max. output frequency (P00.03) is 100. 100Hz timed by 100 is 10000 and the corresponding hex is 2710H.

The command sent by the master:

| | | | | |
|------------------|------------------|----------------------|---------------------|---------------------|
| <u>03</u> | <u>06</u> | <u>00 03</u> | <u>27 10</u> | <u>62 14</u> |
| VFD address | Write command | Parameter address | Parameter data | CRC |

If the operation is successful, the response may be as below (the same with the command sent by the master):

| | | | | |
|------------------|------------------|----------------------|---------------------|---------------------|
| <u>03</u> | <u>06</u> | <u>00 03</u> | <u>27 10</u> | <u>62 14</u> |
| VFD address | Write command | Parameter address | Parameter data | CRC |

Note: The blank in the above command is for illustration. The blank cannot be added in the actual application unless the upper monitor can automatically remove the blank.

Appendix A Technical data

A.1 Derating in application

A.1.1 Capacity

VFD sizing is based on the rated motor current and power. To achieve the rated motor power reference in the table, the rated current of the VFD must be higher than or equal to the rated motor current. Also the rated power of the VFD must be higher than or equal to the rated motor power. The power ratings are the same regardless of the supply voltage within one voltage range.

Note:


- The maximum allowed motor shaft power is limited to $1.5 \cdot P_N$. If the limit is exceeded, motor torque and current are automatically restricted. The function protects the input bridge of the drive against overload.
- The ratings apply at ambient temperature of 40 °C
- It is important to check that in Common DC systems the power flowing through the common DC connection does not exceed P_N .

A.1.2 Derating

The load capacity decreases if the installation site ambient temperature exceeds 40 °C, the altitude exceeds 1000 meters or the carrier frequency is changed from 4 kHz to 8, 12 or 15 kHz.

A.1.2.1 Temperature-based derating


In the temperature range +40 °C – +50 °C, the rated output current is decreased by 1% for every additional 1 °C. Refer to the below list for the actual derating.

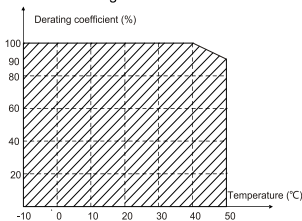

Note: It is not recommended to use the VFD at a temperature higher than 50°C. If you do, you shall be held accountable for the consequences caused.

A.1.2.2 Altitude-based derating

When the altitude of the site where the VFD is installed is lower than 1000 m, the VFD can run at the rated power. If the altitude is higher than 1000 m, the allowable output power is derated. For details about the derating, see the following figure.

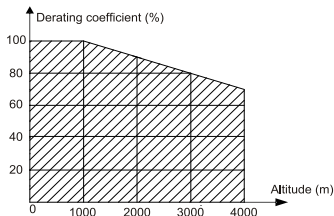

When the altitude exceeds 2000m, configure an isolation transformer on the input end of the VFD. When the altitude exceeds 3000m but is lower than 5000m, contact our company for technical consultation. Do not use the VFD at an altitude higher than 5000m.

A.1.2.3 Carrier frequency-based derating

Setting range of carrier frequency in different power rating is different. The rated power is defined as its factory carrier frequency. The VFD has to derate 10% for every additional 1kHz carrier frequency if the carrier frequency exceeds the factory value.

A.2 CE

A.2.1 CE marking

The CE mark is attached to the drive to verify that the drive follows the provisions of the European Low Voltage (2006/95/EC) and EMC Directives (2004/108/EC).

A.2.2 Compliance with the European EMC Directive

The EMC Directive defines the requirements for immunity and emissions of electrical equipment used within the European Union. The EMC product standard (EN 61800-3:2004) covers requirements stated for drives. See section *EMC regulations*

A.3 EMC regulations

EMC product standard (EN 61800-3:2004) contains the EMC requirements to the VFD.

First environment: domestic environment (includes establishments connected to a low-voltage network which supplies buildings used for domestic purposes).

Second environment includes establishments connected to a network not directly supplying domestic premises.

Four categories of the VFD:

VFD of category C1: VFD of rated voltage less than 1000 V and used in the first environment.

VFD of category C2: VFD of rated voltage less than 1000 V other than pins, sockets and motion devices and intended to be installed and commissioned only by a professional electrician when used in the first environment.

Note: IEC/EN 61800-3 in EMC standard doesn't limit the power distribution of the VFD, but it defines the usage, installation and commission. The professional electrician has necessary skills in installing and/or commissioning power drive systems, including their EMC aspects.

VFD of category C3: VFD of rated voltage less than 1000 V and used in the second environment other than

the first one

VFD of category C4: VFD of rated voltage more than 1000 V or the nominal current is above or equal to 400A and used in the complicated system in second environment

A.3.1 Category C2

The emission limits are complied with the following provisions:

1. The optional EMC filter is selected according to the options and installed as specified in the EMC filter manual.
2. The motor and control cables are selected as specified in this manual.
3. The drive is installed according to the instructions reference in this manual.



✧ In a domestic environment, this product may cause radio interference, in which case supplementary mitigation measures may be required.

A.3.2 Category C3

The immunity performance of the drive complies with the demands of IEC/EN 61800-3, second environment.

The emission limits are complied with the following provisions:

1. The optional EMC filter is selected according to the options and installed as specified in the EMC filter manual.
2. The motor and control cables are selected as specified in this manual.
3. The drive is installed according to the instructions reference in this manual.



✧ A drive of category C3 is not intended to be used on a low-voltage public network which supplies domestic premises. Radio frequency interference is expected if the drive is used on such a network.

Appendix B Dimension drawings

Dimension drawings of the IKON-GE 100 are shown below. The dimensions are given in millimeters and inches.

B.1 Keypad structure

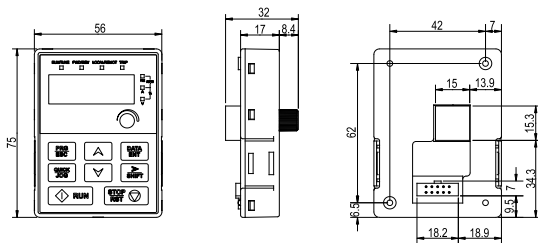


Figure B-1 Keypad structure diagram



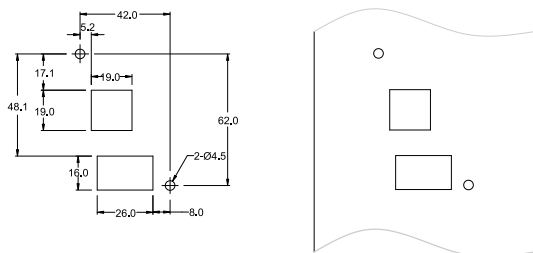


Figure B-2 Cut-out for keypad installation without brackets

The keypad can be externally installed on an optional bracket.

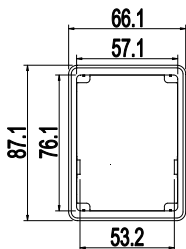


Installation bracket

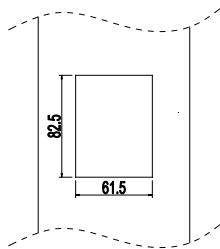

Installation dimensions

B.2 VFD chart

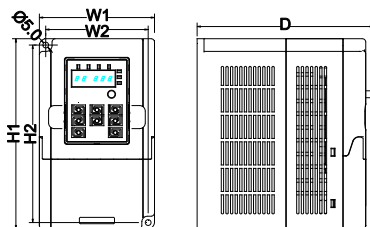

Wall mounting (unit: mm)

| | Model | W1 | W2 | H1 | H2 | D |
|----------|---------------------|-------|------|-------|-------|-------|
| 1PH 220V | IKN-GE100-0R2G-S2-B | 85.0 | 74.0 | 145.5 | 131.5 | 134.2 |
| | IKN-GE100-0R4G-S2-B | 85.0 | 74.0 | 145.5 | 131.5 | 134.2 |
| | IKN-GE100-0R7G-S2-B | 85.0 | 74.0 | 145.5 | 131.5 | 153.2 |
| | IKN-GE100-1R5G-S2-B | 100.0 | 89.0 | 170.5 | 154.0 | 153.2 |
| | IKN-GE100-2R2G-S2-B | 100.0 | 89.0 | 170.5 | 154.0 | 153.2 |
| 3PH 220V | IKN-GE100-0R2G-2-B | 85.0 | 74.0 | 145.5 | 131.5 | 134.2 |
| | IKN-GE100-0R4G-2-B | 85.0 | 74.0 | 145.5 | 131.5 | 134.2 |
| | IKN-GE100-0R7G-2-B | 85.0 | 74.0 | 145.5 | 131.5 | 153.2 |
| | IKN-GE100-1R5G-2-B | 100.0 | 89.0 | 170.5 | 154.0 | 153.2 |
| | IKN-GE100-2R2G-2-B | 100.0 | 89.0 | 170.5 | 154.0 | 153.2 |
| 3PH 380V | IKN-GE100-0R7G-4-B | 100.0 | 89.0 | 170.5 | 154.0 | 153.2 |
| | IKN-GE100-1R5G-4-B | 100.0 | 89.0 | 170.5 | 154.0 | 153.2 |
| | IKN-GE100-2R2G-4-B | 100.0 | 89.0 | 170.5 | 154.0 | 153.2 |

Appendix C Peripheral options and parts

This chapter describes how to select the options and parts of IKON-GE 100 series VFDs.

C.1 Peripheral wiring

Figure C-1 shows the peripheral wiring of IKON-GE 100 series VFDs.

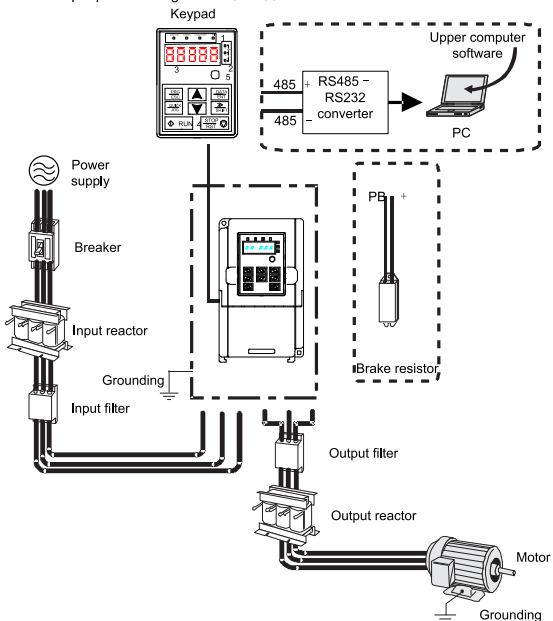










Figure C-1 Peripheral wiring of IKON-GE 100series VFDs

| Image | Name | Description |
|---|-------------------|---|
|  | Cables | Device to transfer the electronic signals |
|  | Breaker | Prevent from electric shock and protect the power supply and the cables system from overcurrent when short circuits occur. (Please select the breaker with the function of reducing high order harmonic and the rated sensitive current to 1 VFD should be above 30mA). |
|  | Input reactor | This device is used to improve the power factor of the input side of the VFD and control the higher harmonic current. The VFD above 37kW (including 37kW) can be connected with DC reactor. |
|  | Input filter | Control the electromagnetic interference generated from the VFD, please install close to the input terminal side of the VFD. |
|  | Braking resistors | Shorten the DEC time |
|  | Output filter | Control the interference from the output side of the VFD and please install close to the output terminals of the VFD. |
|  | Output reactor | Prolong the effective transmitting distance of the VFD to control the sudden high voltage when switching on/off the inverter unit of the VFD. |

C.2 Power supply

| | |
|--|--|
|  | <p>⚡ Check that the voltage degree of the VFD complies with the voltage of the supply power voltage.</p> |
|--|--|

C.3 Cables

C.3.1 Power cables

Dimension the input power and motor cables according to local regulations.



Note: A separate PE conductor is required if the conductivity of the cable shield is not sufficient for the purpose.

| Model | Braking resistor at 100% of the brakign torque(Ω) | Dissipation power (kW) | Dissipation power (kW) | Dissipation power (kW) | Mini braking resistor (Ω) |
|--------------------|--|------------------------|------------------------|------------------------|------------------------------------|
| | | 10% braking | 50% braking | 80% braking | |
| IKN-GE100-0R4G-2-B | 361 | 0.06 | 0.30 | 0.48 | 42 |
| IKN-GE100-0R7G-2-B | 192 | 0.11 | 0.56 | 0.90 | 42 |
| IKN-GE100-1R5G-2-B | 96 | 0.23 | 1.1 | 1.8 | 30 |
| IKN-GE100-2R2G-2-B | 65 | 0.33 | 1.7 | 2.6 | 21 |
| IKN-GE100-0R7G-4-B | 653 | 0.11 | 0.6 | 0.9 | 100 |
| IKN-GE100-1R5G-4-B | 326 | 0.23 | 1.1 | 1.8 | 100 |
| IKN-GE100-2R2G-4-B | 222 | 0.33 | 1.7 | 2.6 | 54 |

Note:


Select the resistor and power of the braking resistor according to the data our company provided.

The braking resistor may increase the braking torque of the VFD. Above table is measured at 100% braking torque, 10%, 50% and 80% braking usage rate, the user can select braking system according to actual working.


| | |
|--|--|
|  | ⚡ Never use a brake resistor with a resistance below the minimum value specified for the particular drive. The drive and the internal chopper are not able to handle the overcurrent caused by the low resistance. |
|  | ⚡ Increase the power of the braking resistor properly in the frequent braking situation (the frequency usage ratio is more than 10%). |

C.7.3 Place the brake resistor

Install all resistors in a place where they will cool.

| | |
|--|--|
|  | ⚡ The materials near the brake resistor must be non-flammable. The surface temperature of the resistor is high. Air flowing from the resistor is of hundreds of degrees Celsius. Protect the resistor against contact. |
|--|--|

Only external braking resistor is needed in IKN-GE100.

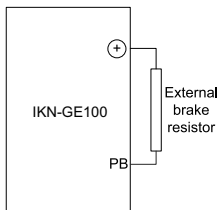

IKON TECHNOLOGIES CO.

Tel: 86-577-27863300

Fax: 86-577-27872255

Email: ikondrives@yahoo.com

Add: No.62-70, DaQiao Road, Liushi. WenZhou, 325604, Zhejiang. China

[Http://www.ikondrives.com](http://www.ikondrives.com)